

ALPHABETICAL INDEX

A

After Landing, 1-6
Aircraft,
 file, 5-5
 mooring, 5-1
 securing, 1-7
Airspeed Correction Table, 6-2
Airspeed Indicator, True, 7-5
Airspeed Indicator Markings, 4-3
Airspeed Limitations, 4-3
Alternate Source Valve, Static
 Pressure, 7-2
Alternator Check, 2-13
Aluminum Surfaces, 5-3
Ammeter, 2-5
Authorized Operations, 4-1

B

Balked Landing, 1-6, 2-19
Before Landing, 1-6
Before Starting Engine, 1-4
Before Take-Off, 1-4, 2-12
 alternator check, 2-13
 magneto check, 2-12
 warm-up, 2-12

C

Cabin Heating, Ventilating and
 Defrosting System, 2-8
Capacity,
 fuel, inside back cover
 oil, inside back cover
Carburetor Air Temperature Gage,
 4-4, 7-5
Carburetor Icing, 3-7

Care,
 interior, 5-4
 propeller, 5-3
Center of Gravity Moment
 Envelope, 4-8
Cessna Customer Care Program,
 5-7
Cessna Progressive Care, 5-7
Circuit Breakers and Fuses, 2-6
Climb,
 data, 2-15
 enroute, 1-5, 2-15
 maximum rate-of-climb
 data chart, 6-3
 speeds, 2-15
Cold Weather Equipment, 7-1
 ground service plug
 receptacle, 7-1
 static pressure alternate
 source valve, 7-2
 winterization kit, 7-1
Cold Weather Operation, 2-19
 flight operations, 2-20
 starting, 2-18
Correction Table, Airspeed, 6-2
Crosswind Landing, 2-18
Crosswind Take-Off, 2-14
Cruise Performance Chart, 2-15,
 6-4
Cruising, 1-5, 2-16

D

Diagram,
 electrical system, 2-4
 ELT control panel, 3-10
 exterior inspection, 1-2
 fuel system, 2-2

Index-1

- instrument panel, 1-8
- loading arrangements, 4-5
- maximum glide, 6-6
- principal dimensions, ii
- radio selector switches, 7-3
- taxiing, 2-11
- Dimensions, Principal, ii
- Disorientation In Clouds, 3-5
 - emergency let-downs through clouds, 3-5
 - executing 180° turn in clouds, 3-5
 - recovery from spiral dive, 3-6
- Ditching, 3-3
- instrument markings, 4-3
- oil, inside back cover
- operation limitations, 4-3
- rough operation or loss of power, 3-7
- starting, 1-4, 2-10
- Engine Failure, 3-1
 - after take-off, 3-1
 - during flight, 3-1
- Enroute Climb, 1-5, 2-15
- Equipment, Cold Weather, 7-1
- Excessive Rate of Electrical Charge, 3-9
- Executing 180° Turn in Clouds, 3-5
- Exterior Inspection Diagram, 1-2
- Exterior Lighting, 2-6

E

- Electrical Fire in Flight, 3-4
- Electrical Power Supply System
 - Malfunctions, 3-8
 - excessive rate of charge, 3-9
 - insufficient rate of charge, 3-9
- Electrical System, 2-3
 - ammeter, 2-5
 - circuit breakers and fuses, 2-6
 - ground service plug receptacle, 7-1
 - master switch, 2-4, 2-5
 - over-voltage sensor and warning light, 2-5
 - schematic, 2-4
- Emergency Landing without Engine Power, 3-2
- Emergency Let-Downs Through Clouds, 3-5
- Emergency Locator Transmitter (ELT), 3-9
 - ELT operation, 3-11
- Empty Weight, inside front cover
- Engine,
 - before starting, 1-4
 - fire during start on ground, 3-3
 - fire in flight, 3-4

F

- File, Aircraft, 5-5
- Finish and Trim Plate, MAA Plate, 5-4
- Fires, 3-3
 - electrical fire in flight, 3-4
 - engine fire during start on ground, 3-3
 - engine fire in flight, 3-4
- Flight in Icing Conditions, 3-6
- Flyable Storage, 5-6
- Forced Landings, 3-2
 - ditching, 3-3
 - emergency landing without engine power, 3-2
 - precautionary landing with engine power, 3-2
- Fuel System, 2-1
 - capacity, inside back cover
 - fuel grade, inside back cover
 - fuel quantity indicators, 4-4
 - long range fuel tanks, 2-3
 - quick-drain valves, 2-3
 - schematic, 2-2
- Fuses and Circuit Breakers, 2-6

G

Graph, Loading, 4-7
Gross Weight, inside front cover
Ground Handling, 5-1
Ground Service Plug Receptacle,
7-1

H

Handling Airplane on Ground, 5-1
Harnesses, Shoulder, 2-9
Headset-Microphone, 7-4
Heating, Ventilating and Defrosting
System, Cabin, 2-8
Hot Weather Operation, 2-21

I

Indicator, Fuel Quantity, 4-4
Indicator, True Airspeed, 7-5
Inspection Requirements, 5-6
Instrument Markings, Engine,
4-3
Instrument Panel Diagram, 1-8
Insufficient Rate of Electrical
Charge, 3-9
Integrated Seat Belt/Shoulder Har-
nesses With Inertia Reel, 2-9
Interior Care, 5-4
Interior Lighting, 2-7
Inertia Reel, Integrated Seat Belt/
Shoulder Harnesses, 2-9

L

Landings, 2-18
after, 1-6
balked, 1-6, 2-18
before, 1-6
crosswind, 2-18

distance table, 6-5
forced, 3-2
normal, 1-6, 2-18
precautionary with power, 3-2
short field, 2-18
without engine power, 3-2
Landing Gear Servicing, inside
back cover
main/nose wheel tire pressure,
inside back cover
nose gear shock strut servicing
inside back cover
Let-Down, 1-6
Lighting Equipment, 2-6
exterior lighting, 2-6
interior lighting, 2-7
Limitations, Airspeed, 4-3
Limitations, Engine Operation,
4-3
Loading Arrangements Diagram,
4-5
Loading Graph, 4-7
Loading Problem, Sample, 4-6
Long Range Fuel Tanks, 2-3
Low Oil Pressure, 3-8

M

MAA Plate/Finish Trim Plate, 5-4
Magnetometer Check, 2-12
Magnetometer Malfunction, 3-8
Maneuvers - Normal Category, 4-1
Maneuvers - Utility Category, 4-2
Markings, Airspeed Indicator, 4-3
Markings, Engine Instrument, 4-3
Master Switch, 2-4, 2-5
Maximum Glide Diagram, 6-6
Maximum Performance Take-Off,
1-5
Maximum Rate-Of-Climb Data
Chart, 6-3
Microphone-Headset, 7-4

Moment Envelope, Center of Gravity, 4-8
Mooring Your Airplane, 5-1

N

Noise Abatement, 2-22
Normal Category Maneuvers, 4-1
Normal Landing, 1-6, 2-17
Normal Take-Off, 1-5
Nose Gear Shock Strut, inside back cover

O

Oil System,
 capacity, inside back cover
 oil/filter change, inside back cover
 oil grade, inside back cover
 pressure gage, 4-3
 quick-drain valve, 7-6
 temperature gage, 4-3
Operation, Cold Weather, 2-18
Operation, Hot Weather, 2-21
Operation Limitations, Engine, 4-3
Operations Authorized, 4-1
Over-Voltage Sensor and Warning Light, 2-5
Owner Follow-Up System, 5-8
 publications, 5-9

P

Painted Surfaces, 5-2
Performance - Specifications, inside front cover
Power Check, 2-13
Precautionary Landing with Engine Power, 3-2
Principal Dimensions Diagram, ii

Index-4

Progressive Care, Cessna, 5-7
Propeller,
 care, 5-3
Publications, 5-9

Q

Quick Drain Valve, Oil, 7-6
Quick-Drain Valves, Fuel, 2-3

R

Radio Selector Switches, 7-3
 operation, 7-3
 speaker-phone switches, 7-4
 transmitter selector switch, 7-3
Recovery From Spiral Dive, 3-6
Rough Engine Operation Or Loss of Power, 3-7
 carburetor icing, 3-7
 low oil pressure, 3-8
 magneto malfunction, 3-8
 spark plug fouling, 3-7

S

Sample Loading Problem, 4-6
Seat Belts and Shoulder Harnesses, 2-9
Securing Aircraft, 1-7
Servicing Requirements, 5-8
 inside back cover
 engine oil, inside back cover
 fuel, inside back cover
 landing gear, inside back cover
Short Field Landing, 2-18
Shoulder Harnesses and Seat Belts, 2-9
Spark Plug Fouling, 3-7
Speaker-Phone Switches, 7-4

- Spins, 2-17
- Stalls, 2-17
 - speed chart, 6-2
- Starting Engine, 1-4, 2-10
 - cold weather, 2-18
- Static Pressure Alternate Source Valve, 7-2
- Storage, Flyable, 5-6
- Surfaces,
 - aluminum, 5-3
 - painted, 5-2
- System,
 - cabin heating, ventilating and defrosting, 2-8
 - electrical, 2-3
 - fuel, 2-1
 - owner follow-up, 5-8
 - wing flap, 2-8

T

- Table of Contents, iii
- Tachometer, 4-4
- Take-Off, 1-5, 2-13
 - before, 1-4, 2-12
 - crosswind, 2-14
 - data chart, 6-3
 - maximum performance, 1-5
 - normal, 1-5
 - performance charts, 2-14

- power check, 2-13
- wing flap settings, 2-14
- Taxing, 2-12
 - diagram, 2-11
- Tire Pressure, inside back cover
- Transmitter Selector Switch, 7-3
- True Airspeed Indicator, 7-5

U

- Utility Category Maneuvers, 4-2

W

- Warm-Up, 2-12
- Weight,
 - empty, inside front cover
 - gross, inside front cover
- Weight and Balance, 4-4
 - center of gravity moment envelope, 4-8
 - loading arrangements diagram, 4-5
 - loading graph, 4-7
 - sample loading problem, 4-6
- Windshield - Windows, 5-2
- Wing Flap Settings, Take-Off, 2-14
- Wing Flap System, 2-8
- Winterization Kit, 7-1