

DA 40 AFM
DA 40 D AFM
DA 40 F AFM



Supplement S4
ELT, ME 406
and ME 406 'ACE'


SUPPLEMENT S4

| TO THE AIRPLANE FLIGHT MANUAL DA 40, DA 40 D
| and DA 40 F
| 406 MHz EMERGENCY LOCATOR TRANSMITTER
| ARTEX ME 406 and ME 406 'ACE'


Doc. No. : 6.01.01-E, 6.01.02-E, 6.01.05-E

Date of Issue of the Supplement : 9 Feb 2006

| Design Change Advisories : OÄM 40-284 (DA 40, DA 40 F)
| OÄM 40-247 (DA 40 D)

Signature : 

DAI DO Representative : T. Krassnitzer

Stamp : 

Date of approval : 25-May-2007

The technical information contained in this document has been approved under the authority of DOA No. EASA.21J.052.


DIAMOND AIRCRAFT INDUSTRIES GMBH
N.A. OTTO-STR. 5
A-2700 WIENER NEUSTADT
AUSTRIA

DA 40 AFM
 DA 40 D AFM
 DA 40 F AFM



Supplement S4
 ELT, ME 406
 and ME 406 'ACE'

0.1 RECORD OF REVISION

Rev. No.	Reason	Chapter	Page(s)	Date of Revision	Approval	Date of Approval	Date Inserted	Signature
1	DA 40 and DA 40 F airplanes implemented	all	all	10 Apr 2007		10 MAY 2007		

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1	10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 1
--	--------	-------------	--------------------------	-----------------

DA 40 AFM
 DA 40 D AFM
 DA 40 F AFM



Supplement S4
 ELT, ME 406
 and ME 406 'ACE'

0.2 LIST OF EFFECTIVE PAGES

Chapter	Page	Date
0	9-S4-0	10 Apr 2007
	9-S4-1	10 Apr 2007
	9-S4-2	10 Apr 2007
	9-S4-3	10 Apr 2007
1, 2	9-S4-4	10 Apr 2007
3	9-S4-4	10 Apr 2007
	9-S4-5	10 Apr 2007
	9-S4-6	10 Apr 2007
4A, 4B, 5, 6	9-S4-6	10 Apr 2007
7	9-S4-7	10 Apr 2007
	9-S4-8	10 Apr 2007
	9-S4-9	10 Apr 2007
	9-S4-10	10 Apr 2007
	9-S4-11	10 Apr 2007
8	9-S4-11	10 Apr 2007

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1 10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 2
--	-------------------------	--------------------------	-----------------

0.3 TABLE OF CONTENTS

	Page
1. GENERAL	9-S4-4
2. OPERATING LIMITATIONS	9-S4-4
3. EMERGENCY PROCEDURES	9-S4-4
4A. NORMAL OPERATING PROCEDURES	9-S4-6
4B. ABNORMAL OPERATING PROCEDURES	9-S4-6
5. PERFORMANCE	9-S4-6
6. MASS AND BALANCE	9-S4-6
7. DESCRIPTION OF THE AIRPLANE AND ITS SYSTEMS	9-S4-7
8. AIRPLANE HANDLING, CARE AND MAINTENANCE	9-S4-11

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1	10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 3
--	--------	-------------	--------------------------	-----------------

1. GENERAL

This Supplement supplies the information necessary for the efficient operation of the airplane when the ELT (Emergency Locator Transmitter) ARTEX ME 406 is installed. The information contained within this Supplement is to be used in conjunction with the complete AFM.

This Supplement is a permanent part of this AFM and must remain in this AFM at all times when the ELT ARTEX ME 406 is installed.

2. LIMITATIONS

No change.

3. EMERGENCY PROCEDURES

Before performing a forced landing, especially in remote and mountainous areas, the ELT transmitter should be activated manually by switching the panel mounted switch to the 'ON'-position. The red LED on the panel mounted switch should flash.

Immediately after a forced landing where emergency assistance is required, the ELT should be utilized as follows:

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1	10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 4
--	--------	-------------	--------------------------	-----------------

CAUTION

The panel mounted switch could be inoperative if damaged during a forced landing. In this case the ELT can be switched ON or OFF with the main switch which is located on the ELT unit. The following points must then be executed directly on the ELT-unit.

1. ENSURE ELT ACTIVATION:

- Switch the panel mounted switch to the 'ON'-position, even if the LED flashes.

If the airplane's radio is operable and can be safely used (no threat of fire or explosion), turn ON and select 121.5 MHz. If the ELT can be heard transmitting, it is working properly.

2. PRIOR TO SIGHTING RESCUE AIRCRAFT:

- Conserve airplane battery. Do not activate radio transceiver.

3. AFTER SIGHTING RESCUE AIRCRAFT:

- Switch the panel mounted switch to the 'ARM'-position to prevent radio interference. Attempt contact with rescue aircraft with the radio transceiver set to a frequency of 121.5 MHz. If no contact is established, switch the panel mounted switch to the 'ON'-position immediately.

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1	10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 5
--	--------	-------------	--------------------------	-----------------

4. FOLLOWING RESCUE

- Switch the panel mounted switch to the 'ARM'-position, terminating emergency transmissions.

The ELT may be activated by hard landings or in heavy turbulence. The ELT should then be reset by toggling the panel mounted switch from the 'ARM'-position to the 'ON'-position and then back to the 'ARM'-position, or if the panel mounted switch is already in the 'ON'-position, it must be placed into the 'ARM'-position. Ensure that the ELT does not transmit.

4A. NORMAL OPERATING PROCEDURES

No change.

4B. ABNORMAL OPERATING PROCEDURES

No change.

5. PERFORMANCE

No change.

6. MASS AND BALANCE

Upon removal or installation of the ELT the change of empty mass and corresponding center of gravity of the airplane must be recorded according to Chapter 6 of the Airplane Flight Manual.

Doc. No. 6.01.01-E	Rev. 1	10 Apr 2007	OÄM 40-284	Page 9 - S4 - 6
Doc. No. 6.01.02-E			OÄM 40-247	
Doc. No. 6.01.05-E				

DA 40 AFM
 DA 40 D AFM
 DA 40 F AFM




Supplement S4
 ELT, ME 406
 and ME 406 'ACE'


7. DESCRIPTION OF THE AIRPLANE AND ITS SYSTEMS

GENERAL


The ARTEX ME 406 ELT is an automatically activated Emergency Locator Transmitter. It may also be manually activated via the 'Main'-switch on the unit, or via the panel mounted switch, which is installed on the right side of the instrument panel of the DA 40, DA 40 D or DA 40 F.

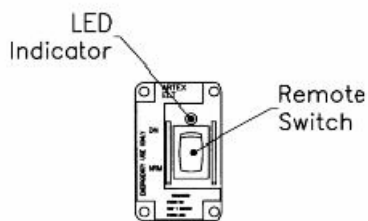

PANEL MOUNTED SWITCH

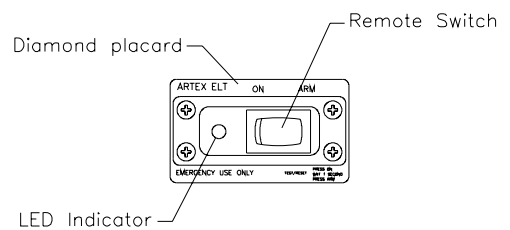

ELT "ACE" Option

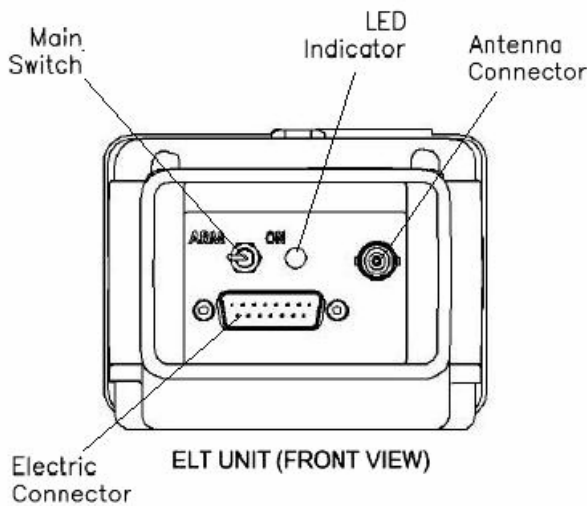

ELT UNIT (FRONT VIEW)

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1	10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 7
--	--------	-------------	--------------------------	-----------------

When the ELT is switched on, the ELT broadcasts a standard swept tone on the international distress frequency 121.5 MHz. Additionally, the 406.025 MHz transmitter turns on every 50 seconds for 520 milliseconds. During that time an encoded digital message is sent to a satellite. The information contained in that message is:

- Serial number of the transmitter or Airplane I.D.
- Country Code
- I.D. Code

One advantage of the 406.025 MHz transmitter is that it will produce a much more accurate position, typically 1 to 2 kilometers as compared to 15 to 20 kilometers for 121.5 MHz transmitter. The ELT also transmits a digital message which allows the search and rescue authorities to contact the owner/operator of the airplane through a database. The information contained in the database, that may be useful in the event of a crash, is:

- Type of Airplane
- Address of Owner
- Telephone Number of Owner
- Airplane Registration Number
- Alternate Emergency Contact

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1	10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 8
--	--------	-------------	--------------------------	-----------------

DA 40 AFM
DA 40 D AFM
DA 40 F AFM



Supplement S4
ELT, ME 406
and ME 406 'ACE'

Once the ELT is activated and the 406.025 MHz signal is detected from the satellite and a position is calculated, the 121.5 MHz transmission is used to home in on the crash site. Because airplane communication radios are not capable of receiving 406.025 MHz transmissions, the only method of monitoring the ELT is the flashing cockpit light or the flashing light on the ELT unit, the buzzer or the 121.5 MHz transmission which may be monitored on the airplane's communication transceivers.

DESCRIPTION

The system consists of a panel mounted switch, installed on the instrument panel, the Emergency Locator Transmitter-Unit (ELT-Unit), installed behind the baggage compartment frame, a buzzer, installed next to the ELT unit and an antenna which is installed behind the ring frame.

An acceleration indicator ('g'-switch) activates the ELT upon sensing a sudden change of velocity, along the airplane's longitudinal axis. As long as the ELT is locked into its mounting tray, it will activate in a crash. Neither the cockpit switch nor the ELT unit switch can be positioned to prevent automatic activation once the unit is mounted correctly.

When the ELT is activated, the presence of the emergency swept tone and a flashing front panel light indicate a normal function of the unit. The front panel light must immediately begin to continuously flash upon ELT activation.

The ELT can also be manually activated, for example for testing or after an emergency landing. It can be activated either by positioning the panel mounted switch to the 'ON'-position or by positioning the main switch of the ELT unit to the 'ON'-position.

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1	10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 9
--	--------	-------------	--------------------------	-----------------

FLIGHT OPERATION

■ The main switch of the ELT unit must be in the 'ARM'-position and the panel mounted switch must be in the 'ARM'-position during flight. The ELT is in standby-mode, that means, the ELT can now be activated by the 'g'-Switch. The function test (only during the first five minutes of each hour) gives the pilot the possibility to verify that the ELT is in the 'ARMED'-mode.

The ELT may be activated by hard landings or in heavy turbulence. The ELT should then be reset by toggling the panel mounted switch from the 'ARM'-position to the 'ON'-position and then back to the 'ARM'-position, or if the panel mounted switch is already in the 'ON'-position, it must be placed into the 'ARM'-position. Ensure that the ELT does not transmit. It should be remembered that the ELT cannot be reset if either the panel mounted switch or the unit switch is in the 'ON'-position.

FUNCTION TEST

The following function test is recommended to be performed once a month to verify that the ELT is operating properly. Regulations require that transmitter tests only be done during the first 5 minutes of each hour and must not last for more than 3 audio sweeps (approx. 1 second).

Note that the batteries must be replaced when the transmitter has been in use for more than 1 cumulative hour (including tests).

Performing the Test:

- Monitor 121.50 MHz using the airplane's COM receiver. Turn the squelch off.
- Switch the panel mounted switch to 'ON', wait for 3 sweeps on the COM receiver, which takes about 1 second. Verify that the LED flashes. Then turn the switch back to the 'ARM'-position. If the LED doesn't stop flashing or the audio sweep tone can still be heard, the main switch on the ELT unit should be set to the 'ON' position and back to the 'ARM'-position. Verify that the LED does not flash and the audio sweep tone is off.

8. AIRPLANE HANDLING, CARE AND MAINTENANCE

No change.

Doc. No. 6.01.01-E Doc. No. 6.01.02-E Doc. No. 6.01.05-E	Rev. 1	10 Apr 2007	OÄM 40-284 OÄM 40-247	Page 9 - S4 - 11
--	--------	-------------	--------------------------	------------------