

TABLE OF CONTENTS

SECTION 7

DESCRIPTION AND OPERATION OF THE AIRPLANE AND ITS SYSTEMS

Paragraph No.		Page No.
7.1	The Airplane	7-1
7.3	Airframe	7-1
7.5	Engine and Propeller	7-3
7.7	Induction System	7-3
7.9	Engine Controls	7-4
7.11	Landing Gear	7-6
7.13	Flight Controls	7-10
7.15	Fuel System	7-13
7.17	Electrical System	7-15
7.19	Vacuum System	7-19
7.21	Instrument Panel	7-21
7.23	Pitot-Static System	7-23
7.25	Cabin Features	7-23
7.27	Baggage Area	7-23
7.29	Heating and Ventilating System	7-25
7.31	Stall Warning	7-25
7.33	Finish	7-25
7.35	Air Conditioning	7-25
7.37	Piper External Power	7-26
7.39	Emergency Locator Transmitter	7-27

SECTION 7
DESCRIPTION AND OPERATION
OF THE AIRPLANE AND ITS SYSTEMS

7.1 THE AIRPLANE

The Lance is a single engine, retractable landing gear, all metal airplane which features a spacious and comfortable cabin and Piper's traditional smooth, easy handling characteristics.

Seating for up to seven occupants, two separate one hundred pound luggage compartments, and a fuel capacity of 98 gallons give the Lance a high degree of flexibility. As with any aircraft, the Lance requires proper loading; however a simple-to-use weight and balance calculator provided with each airplane makes the determination of acceptable fuel and payload combinations easy and uncomplicated. Large floor space, easily removable seats, broad, well-placed cabin doors and a nose baggage compartment make the Lance a versatile aircraft for transporting passengers or cargo or a combination of both.

7.3 AIRFRAME

With the exception of the steel engine mount, the landing gear, miscellaneous steel parts, the cowling, and the lightweight plastic extremities (tips of wings, tail fin, rudder and stabilator), the basic airframe is of aluminum alloy. Aerobatics are prohibited in this airplane since the structure is not designed for aerobatic loads.

The fuselage is a semi-monocoque structure. There is a front door on the right side and a rear door on the left. A cargo door is installed aft of the rear passenger door. When both rear doors are open, large pieces of cargo can be loaded through the extra-wide opening. A door on the right side of the nose section gives access to the nose baggage compartment.

The wing is of a conventional design and employs a laminar flow NACA 65₂-415 airfoil section. The main spar is located at approximately 40% of the chord aft of the leading edge. The wings are attached to the fuselage by the insertion of the butt ends of the spar into a spar box carry-through, which is an integral part of the fuselage structure. The bolting of the spar ends into the spar box carry-through structure, which is located under the center seats, provides in effect a continuous main spar. The wings are also attached fore and aft of the main spar by an auxiliary front spar and a rear spar. The rear spar, in addition to taking torque and drag loads, provides a mount for flaps and ailerons. The four-position wing flaps are mechanically controlled by a handle located between the front seats. When fully retracted, the right flap locks into place to provide a step for cabin entry. Each wing contains two interconnected fuel tanks. Both tanks on one side are filled through a single filler neck located in the outboard tank.

A vertical stabilizer, an all-movable horizontal stabilator, and a rudder make up the empennage. The stabilator incorporates an anti-servo tab which improves longitudinal stability and provides longitudinal trim. This tab moves in the same direction as the stabilator, but with increased travel.

7.5 ENGINE AND PROPELLER

The Lycoming IO-540-K1A5D (Serial Nos. 32R-7680001 through 32R-7680140) or IO-540-K1G5D (Serial Nos. 32R-7680141 through 32R-7680525) engine installed in the PA-32R-300 is rated at 300 horsepower at 2700 rpm. This engine has a compression ratio of 8.7 to 1 and requires 100/130 minimum octane fuel. The engine is equipped with a geared starter, a 60 ampere alternator, dual magnetos, vacuum pump drive, fuel pump, and fuel injection.

The exhaust system consists of individual exhaust pipes routed in pairs to three heavy gauge stainless steel mufflers. Exhaust gases are directed overboard at the underside of the engine cowl. The mufflers are surrounded by a shroud which provides heat for the cabin and for windshield defrosting.

Cowling on the Cherokee Lance is designed to cool the engine in all normal flight conditions, including protracted climb, without the use of cowl flaps or cooling flanges.

The constant speed propeller is a Hartzell HC-C2YK-1()F/F8475D-4 with a diameter of 80 inches. The propeller is controlled by a governor mounted at the left forward side of the crankcase. The governor is operated by a cable from the power control quadrant.

7.7 INDUCTION SYSTEM

An induction scoop is located on the left side of the lower cowl. An intake air box is attached to the inside of the cowl adjacent to the air filter box. The air filter box is located at the aft end of the induction scoop. Access to the filter is gained through a detachable plate located on the outside of the lower cowl.

The intake air box incorporates a manually operated two-way valve designed to allow induction air either to pass through the filter or to bypass the filter and supply heated air directly to the engine. Alternate air selection insures induction air flow should the filter become blocked. Since the air is heated, the alternate air system offers protection against induction system blockage caused by snow or freezing rain, or by the freezing of moisture accumulated in the induction air filter. Alternate air is unfiltered; therefore, it should not be used during ground operation when dust or other contaminants might enter the system. The primary (through the filter) induction source should always be used for takeoffs.

The Bendix RSA-10ED1 type fuel injection system consists of a servo regulator which meters fuel flow in proportion to airflow to the engine, giving the proper fuel-air mixture at all engine speeds, and a fuel flow divider which receives the metered fuel and accurately divides the fuel flow among the individual cylinder fuel nozzles.

A combination fuel flow indicator and manifold pressure gauge is installed in the left side of the instrument panel. The fuel flow indicator is connected to the fuel flow divider and monitors fuel pressure. The instrument converts fuel pressure to an accurate indication of fuel flow in gallons per hour and percentage of cruise power.

7.9 ENGINE CONTROLS

Engine controls consist of a throttle control, a propeller control and a mixture control lever. These controls are located on the control quadrant on the lower center of the instrument panel (Figure 7-1) where they are accessible to both the pilot and the copilot. The controls utilize teflon-lined control cables to reduce friction and binding.


The throttle lever is used to adjust the manifold pressure. It incorporates a gear up warning horn switch which is activated during the last portion of travel of the throttle levers to the low power position. If the landing gear is not locked down, the horn will sound until the gear is down and locked or until the power setting is increased. This is a safety feature to prevent an inadvertent gear up landing.

The propeller control lever is used to adjust the propeller speed from high RPM to low RPM.


The mixture control lever is used to adjust the air to fuel ratio. The engine is shut down by the placing of the mixture control lever in the full lean position. In addition, the mixture control has a lock to prevent activation of the mixture control instead of the pitch control. For information on the leaning procedure, see the Avco-Lycoming Operator's Manual.

The friction adjustment lever on the right side of the control quadrant may be adjusted to increase or decrease the friction holding the throttle, propeller, and mixture controls or to lock the controls in a selected position.

The alternate air control is located to the right of the control quadrant. When the alternate air lever is in the up, or closed, position the engine is operating on filtered air; when the lever is in the down, or open, position the engine is operating on unfiltered, heated air. The control is operated by pressing the knob to the left to clear the retaining gate and then moved in the desired direction (refer to Figure 7-1).

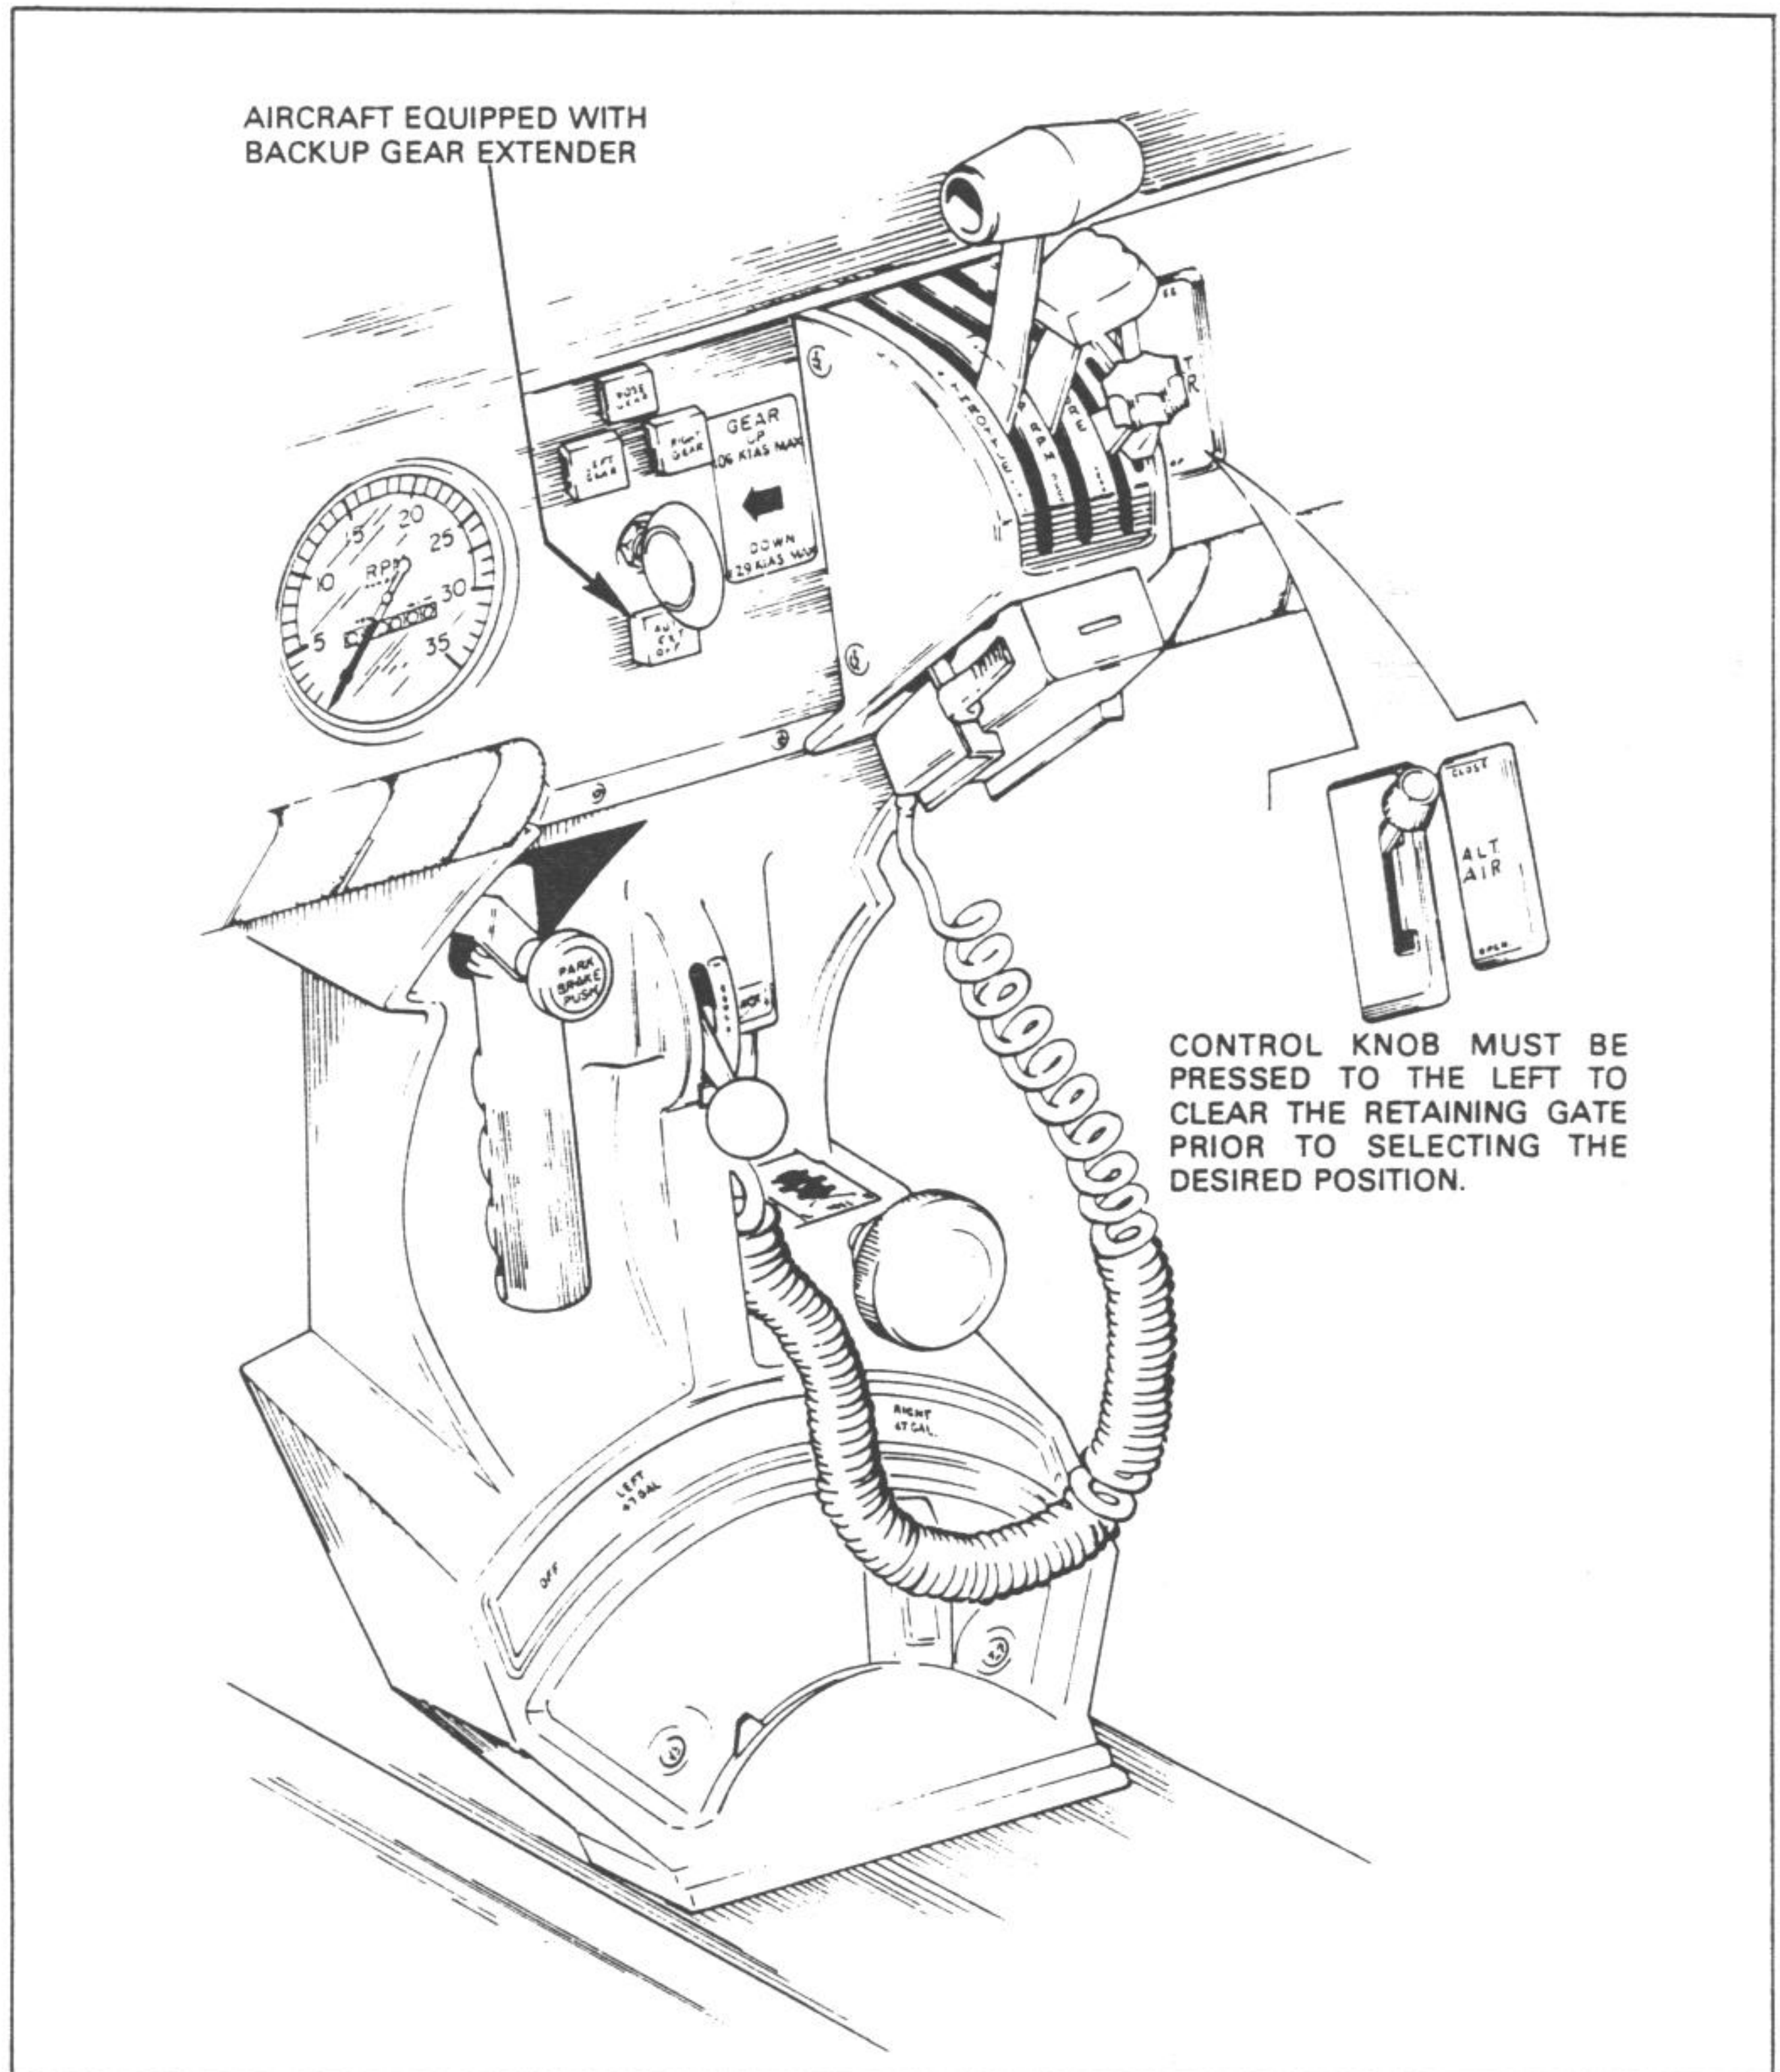

CONTROL QUADRANT AND CONSOLE
Figure 7-1

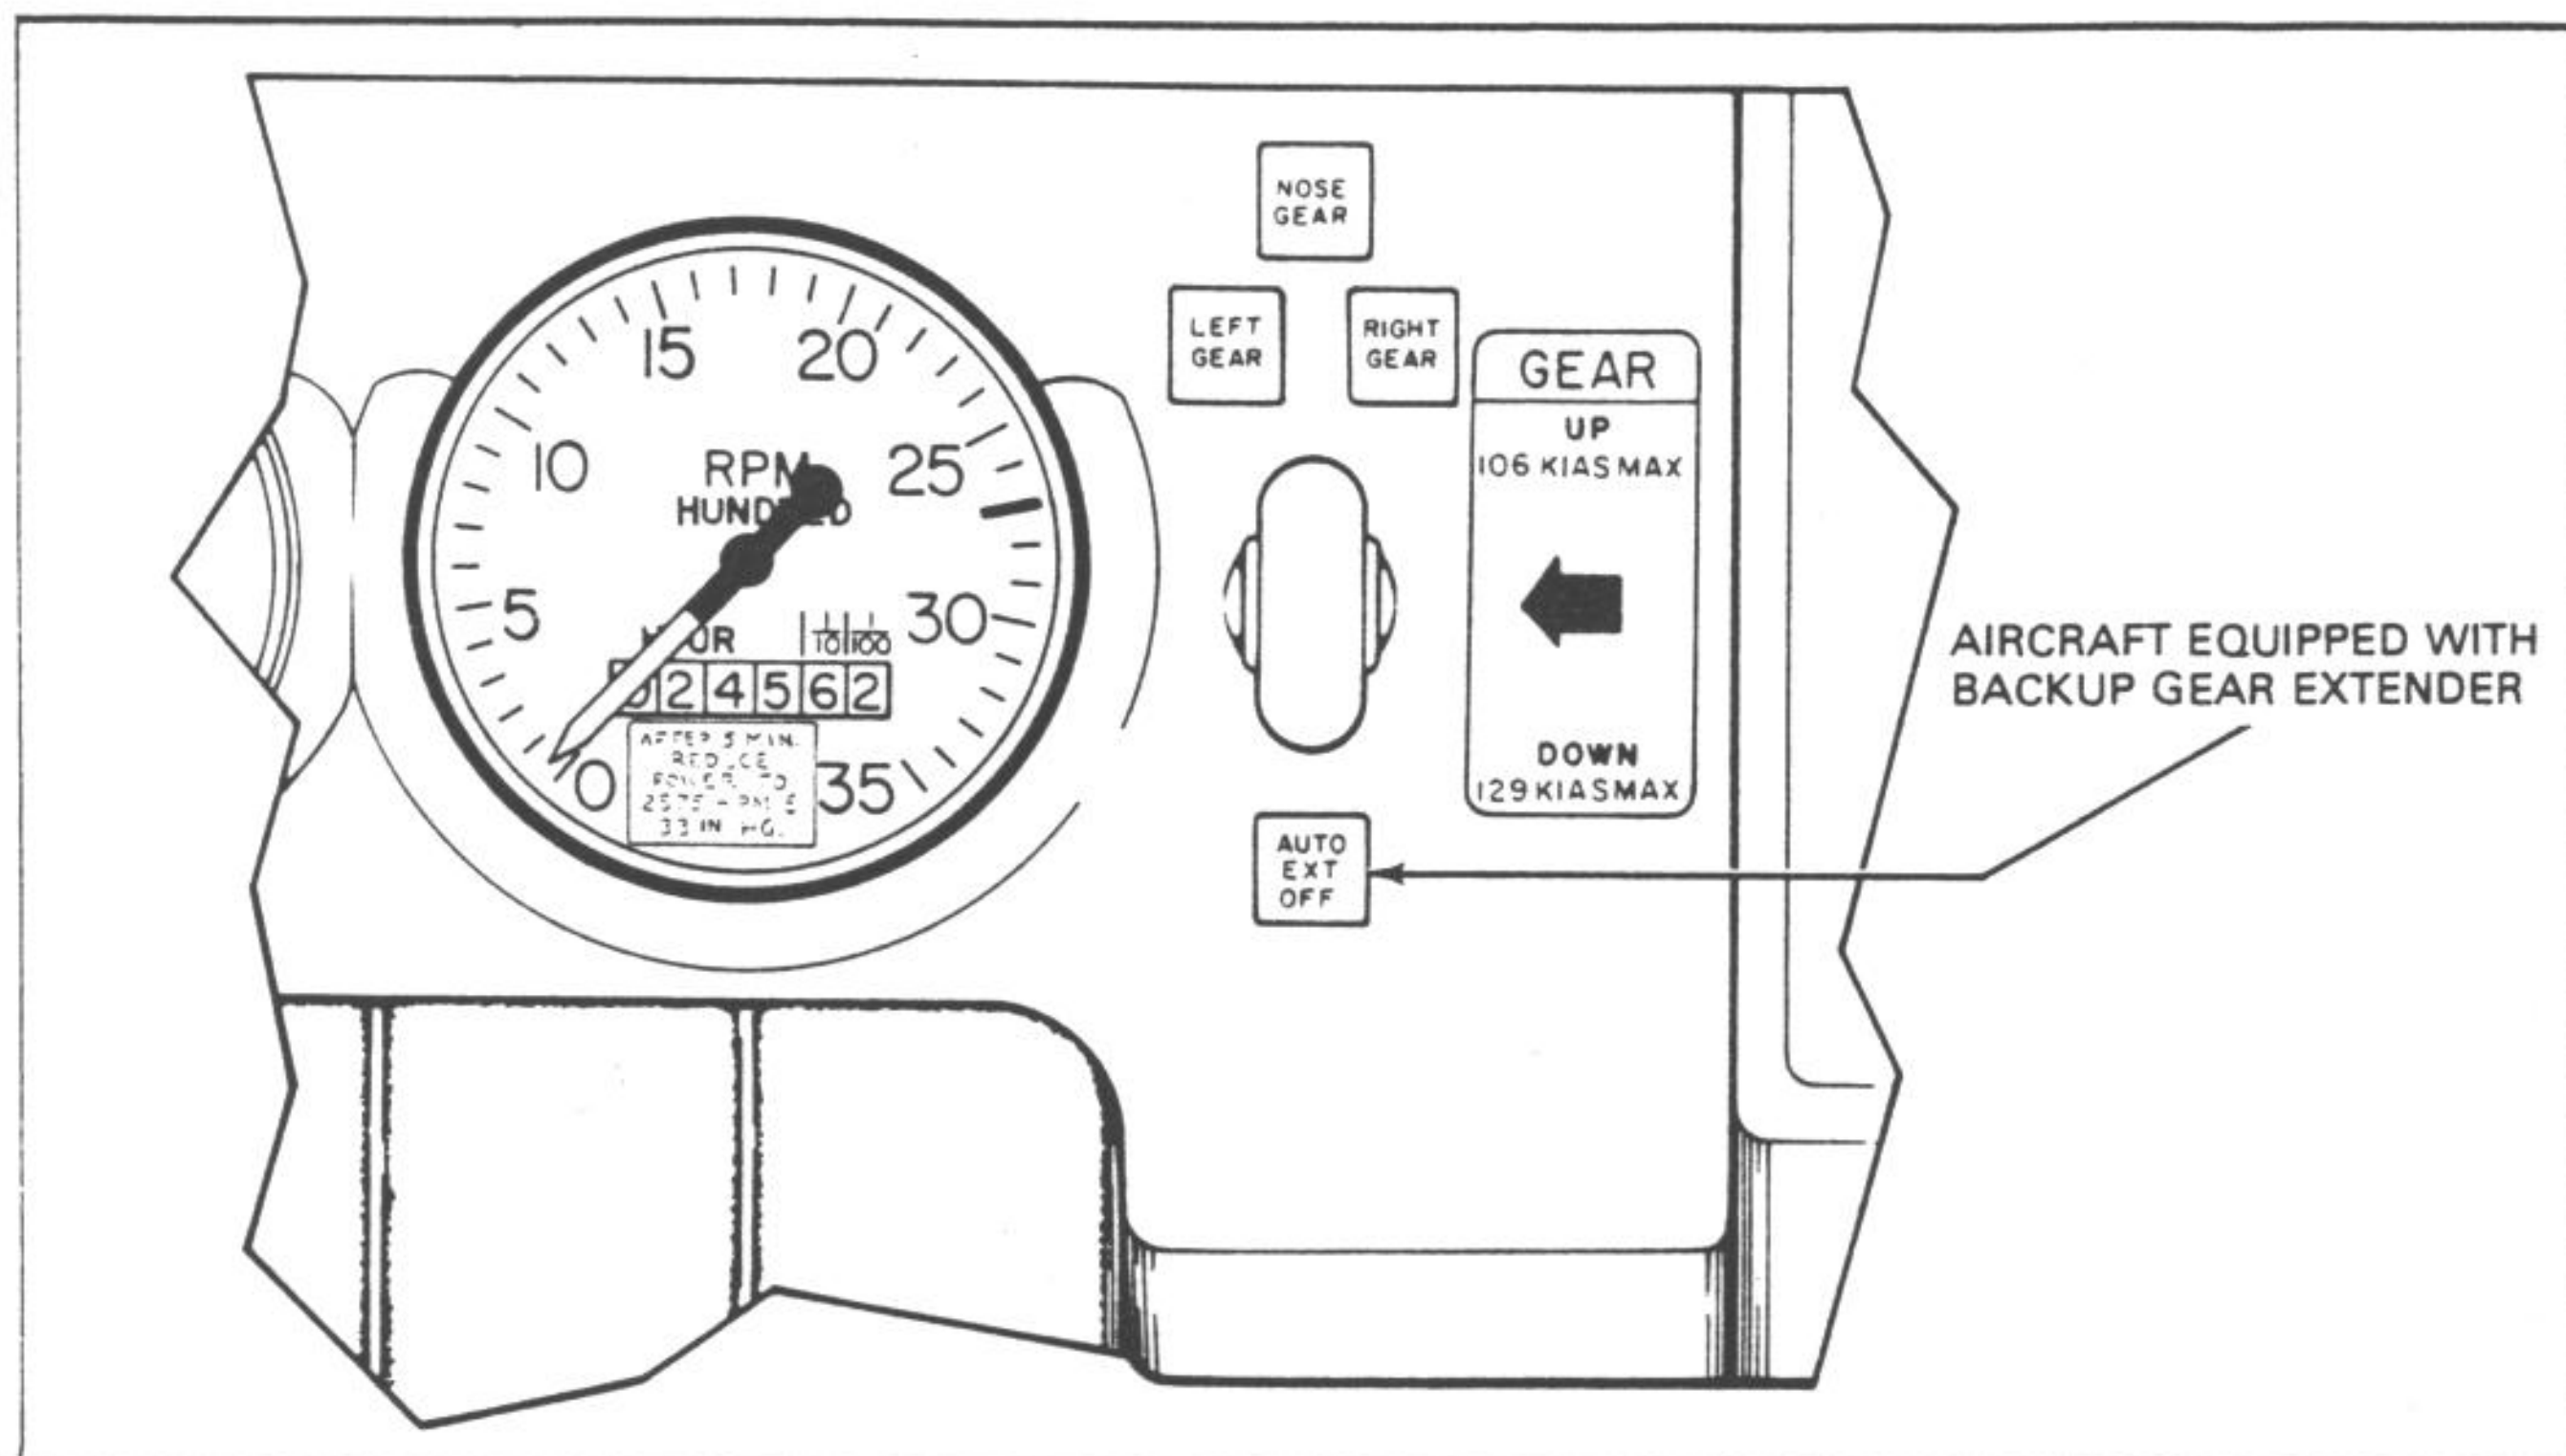

LANDING GEAR SELECTOR

Figure 7-3

7.11 LANDING GEAR

The Cherokee Lance is equipped with a retractable tricycle landing gear, which is hydraulically actuated by an electrically powered reversible pump. The pump is controlled by a selector switch on the instrument panel to the left of the control quadrant (Figure 7-3). The landing gear is retracted or extended in about seven seconds.

WARNING

Avoid ejecting objects out of the pilot storm window which could possibly enter or obstruct the holes in the mast.

Some aircraft also incorporate a pressure sensing device in the system which lowers the gear regardless of gear selector position, depending upon airspeed and engine power (propeller slipstream). Gear extension is designed to occur, even if the selector is in the up position, at airspeeds below approximately 118 mph with power off. The extension speeds will vary from approximately 93 mph to approximately 118 mph depending on power settings and altitude. The device also prevents the gear from retracting at airspeeds below approximately 93 mph with full power, though the selector switch may be in the up position. This speed increases with reduced power and/or increased altitude. Manual override of the device is provided by an emergency gear lever located between the front seats to the right of the flap handle (refer to Figure 7-9). The sensing device operation is controlled by differential air pressure across a flexible diaphragm which is mechanically linked to a hydraulic valve and an electrical switch which actuates the pump motor. A high pressure and static air source for actuating the diaphragm is provided in a mast mounted on the left side of the fuselage above the wing. Any obstruction of the holes in this mast will cause the gear to extend. An optional heated mast is available to alleviate obstruction in icing conditions. The optional heated mast is turned on whenever the PITOT HEAT is turned on.

The emergency gear lever, when placed in the raised position, can be used to override the system, and gear position is then controlled by the selector switch regardless of airspeed/power combinations. The emergency gear lever is provided with a latching device which may be used to lock the override lever in the up position. The latch is located on the right side panel of the console below the level of the manual override lever. To lock the override lever in the up position, raise the override lever to the full up position and push the latch down. A yellow warning light located below the gear selector switch (Figure 7-3) flashes to warn the pilot that the automatic gear lowering system is disabled. The latch is spring-loaded to the off position to aid disengagement. To disengage the latch raise the override lever and release. The lever will return to its normal position and the yellow flashing light will extinguish. The lever must also be latched in the raised (up) position when gear-up stalls are practiced.

The emergency gear lever, when used for emergency extension of the gear, manually releases hydraulic pressure to permit the gear to free fall with spring assistance on the nose gear. The lever must be held in the downward position for emergency extension.

Gear down and locked positions are indicated by three green lights located above the selector, and a red Warning Gear Unsafe light is located at the top of the panel. An all lights out condition indicates the gear is up. The landing gear should not be retracted above a speed of 125 mph and should not be extended above a speed of 150 mph.

The main landing gear uses Cleveland 6.00 x 6 wheels. The main gear incorporate brake drums and Cleveland double disc hydraulic brake assemblies. The nose wheel carries a 5.00 x 5 six ply tire and the main gear use 6.00 x 6 eight ply tires. All three tires are tube type.

Two micro-switches in the throttle quadrant activate a warning horn and red Warning Gear Unsafe light under the following conditions:

1. Gear up and power reduced below approximately 14 inches of manifold pressure.
2. On aircraft equipped with the backup gear extender, if the system has extended the landing gear and the gear selector is UP, except at full throttle.
3. Gear selector switch UP while on the ground.


On aircraft which are NOT equipped with the backup gear extender, an additional switch is installed which activates the warning horn and light whenever the flaps are extended beyond the approach position (10°) and the landing gear are not down and locked.

The gear warning horn emits a 90 Hz beeping sound in contrast to the stall warning horn which emits a continuous sound.

The nose gear is steerable through a 22.5 degree arc each side of center through the use of the rudder pedals. As the nose wheel retracts, the steering linkage disengages to reduce rudder pedal loads in flight. The nose wheel is equipped with a hydraulic shimmy dampener to reduce nose wheel shimmy.


The oleo struts are of the air-oil type, with normal extension being 2.60 inches for the nose gear and 4.0 inches for the main gear under normal static load (empty weight of airplane plus full fuel and oil).

The standard brake system includes toe brakes on the left and right set of rudder pedals and a hand brake located below and near the center of the instrument panel. The toe brakes and the hand brake have individual brake cylinders, but all cylinders use a common reservoir. The parking brake is incorporated in the lever brake and is operated by pulling back on the lever and depressing the knob attached to the top of the handle. To release the parking brake, pull back on the brake lever; then allow the handle to swing forward.

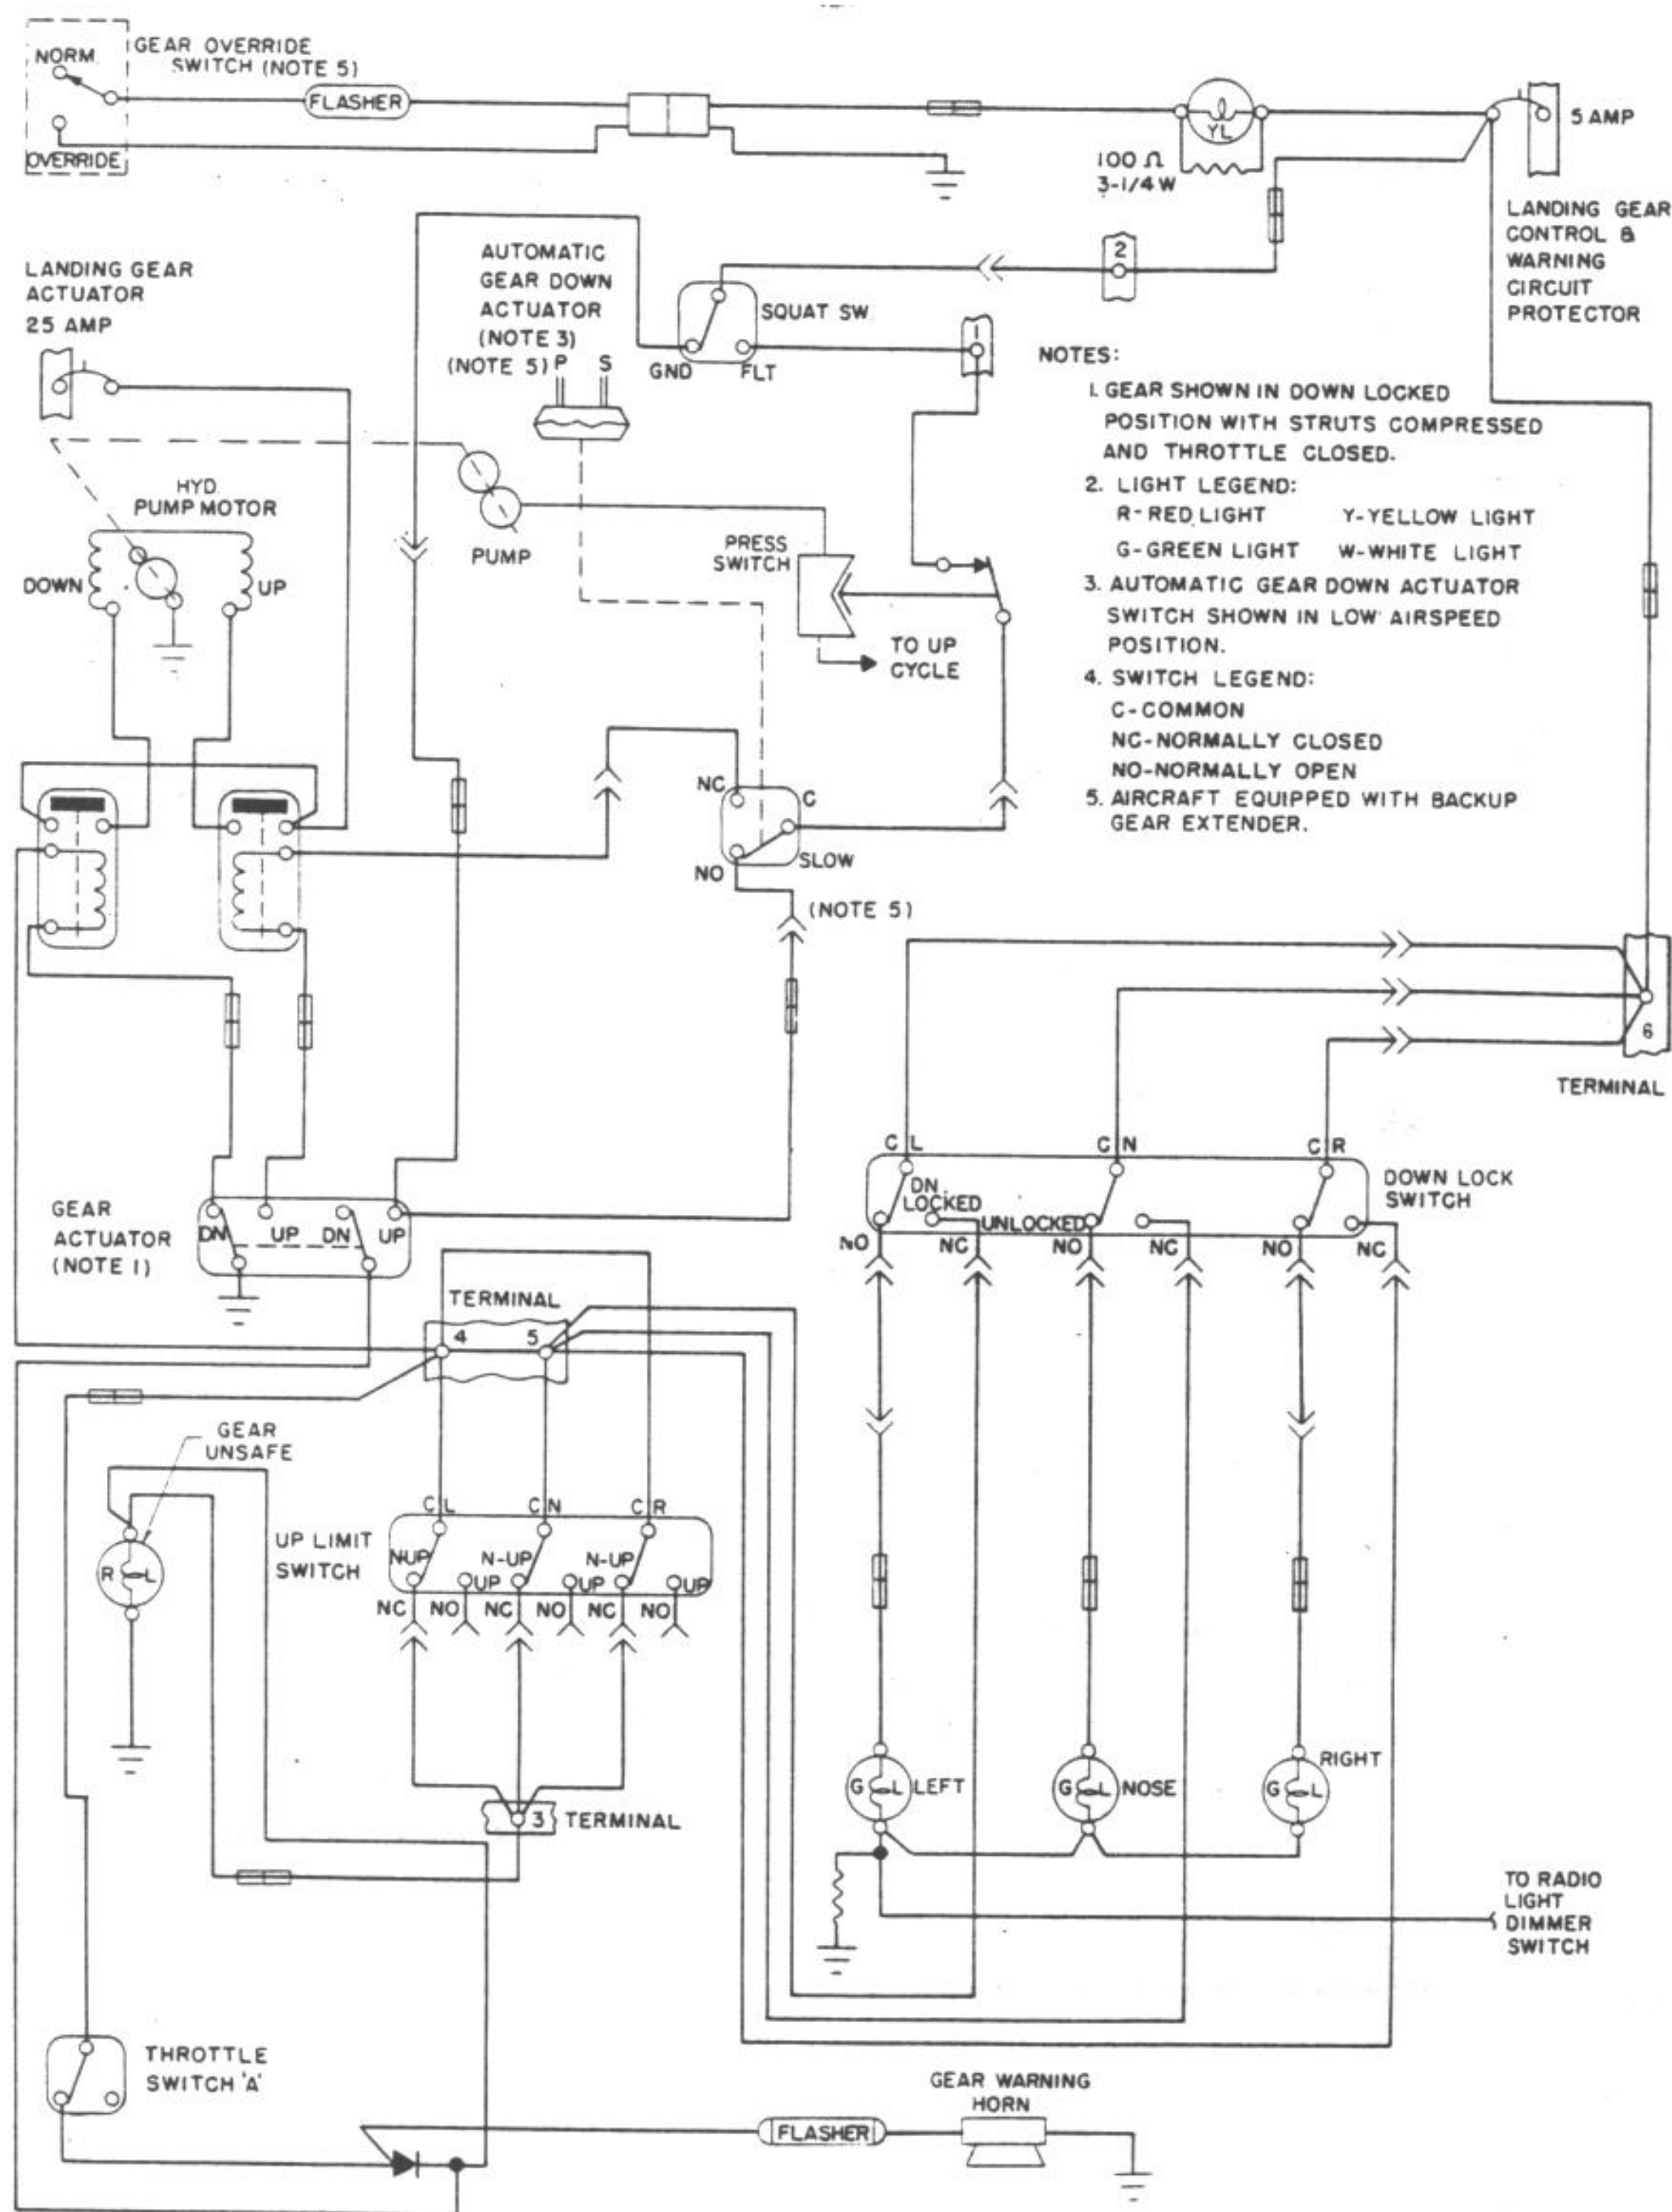


LANDING GEAR ELECTRICAL SCHEMATIC

Figure 7-5

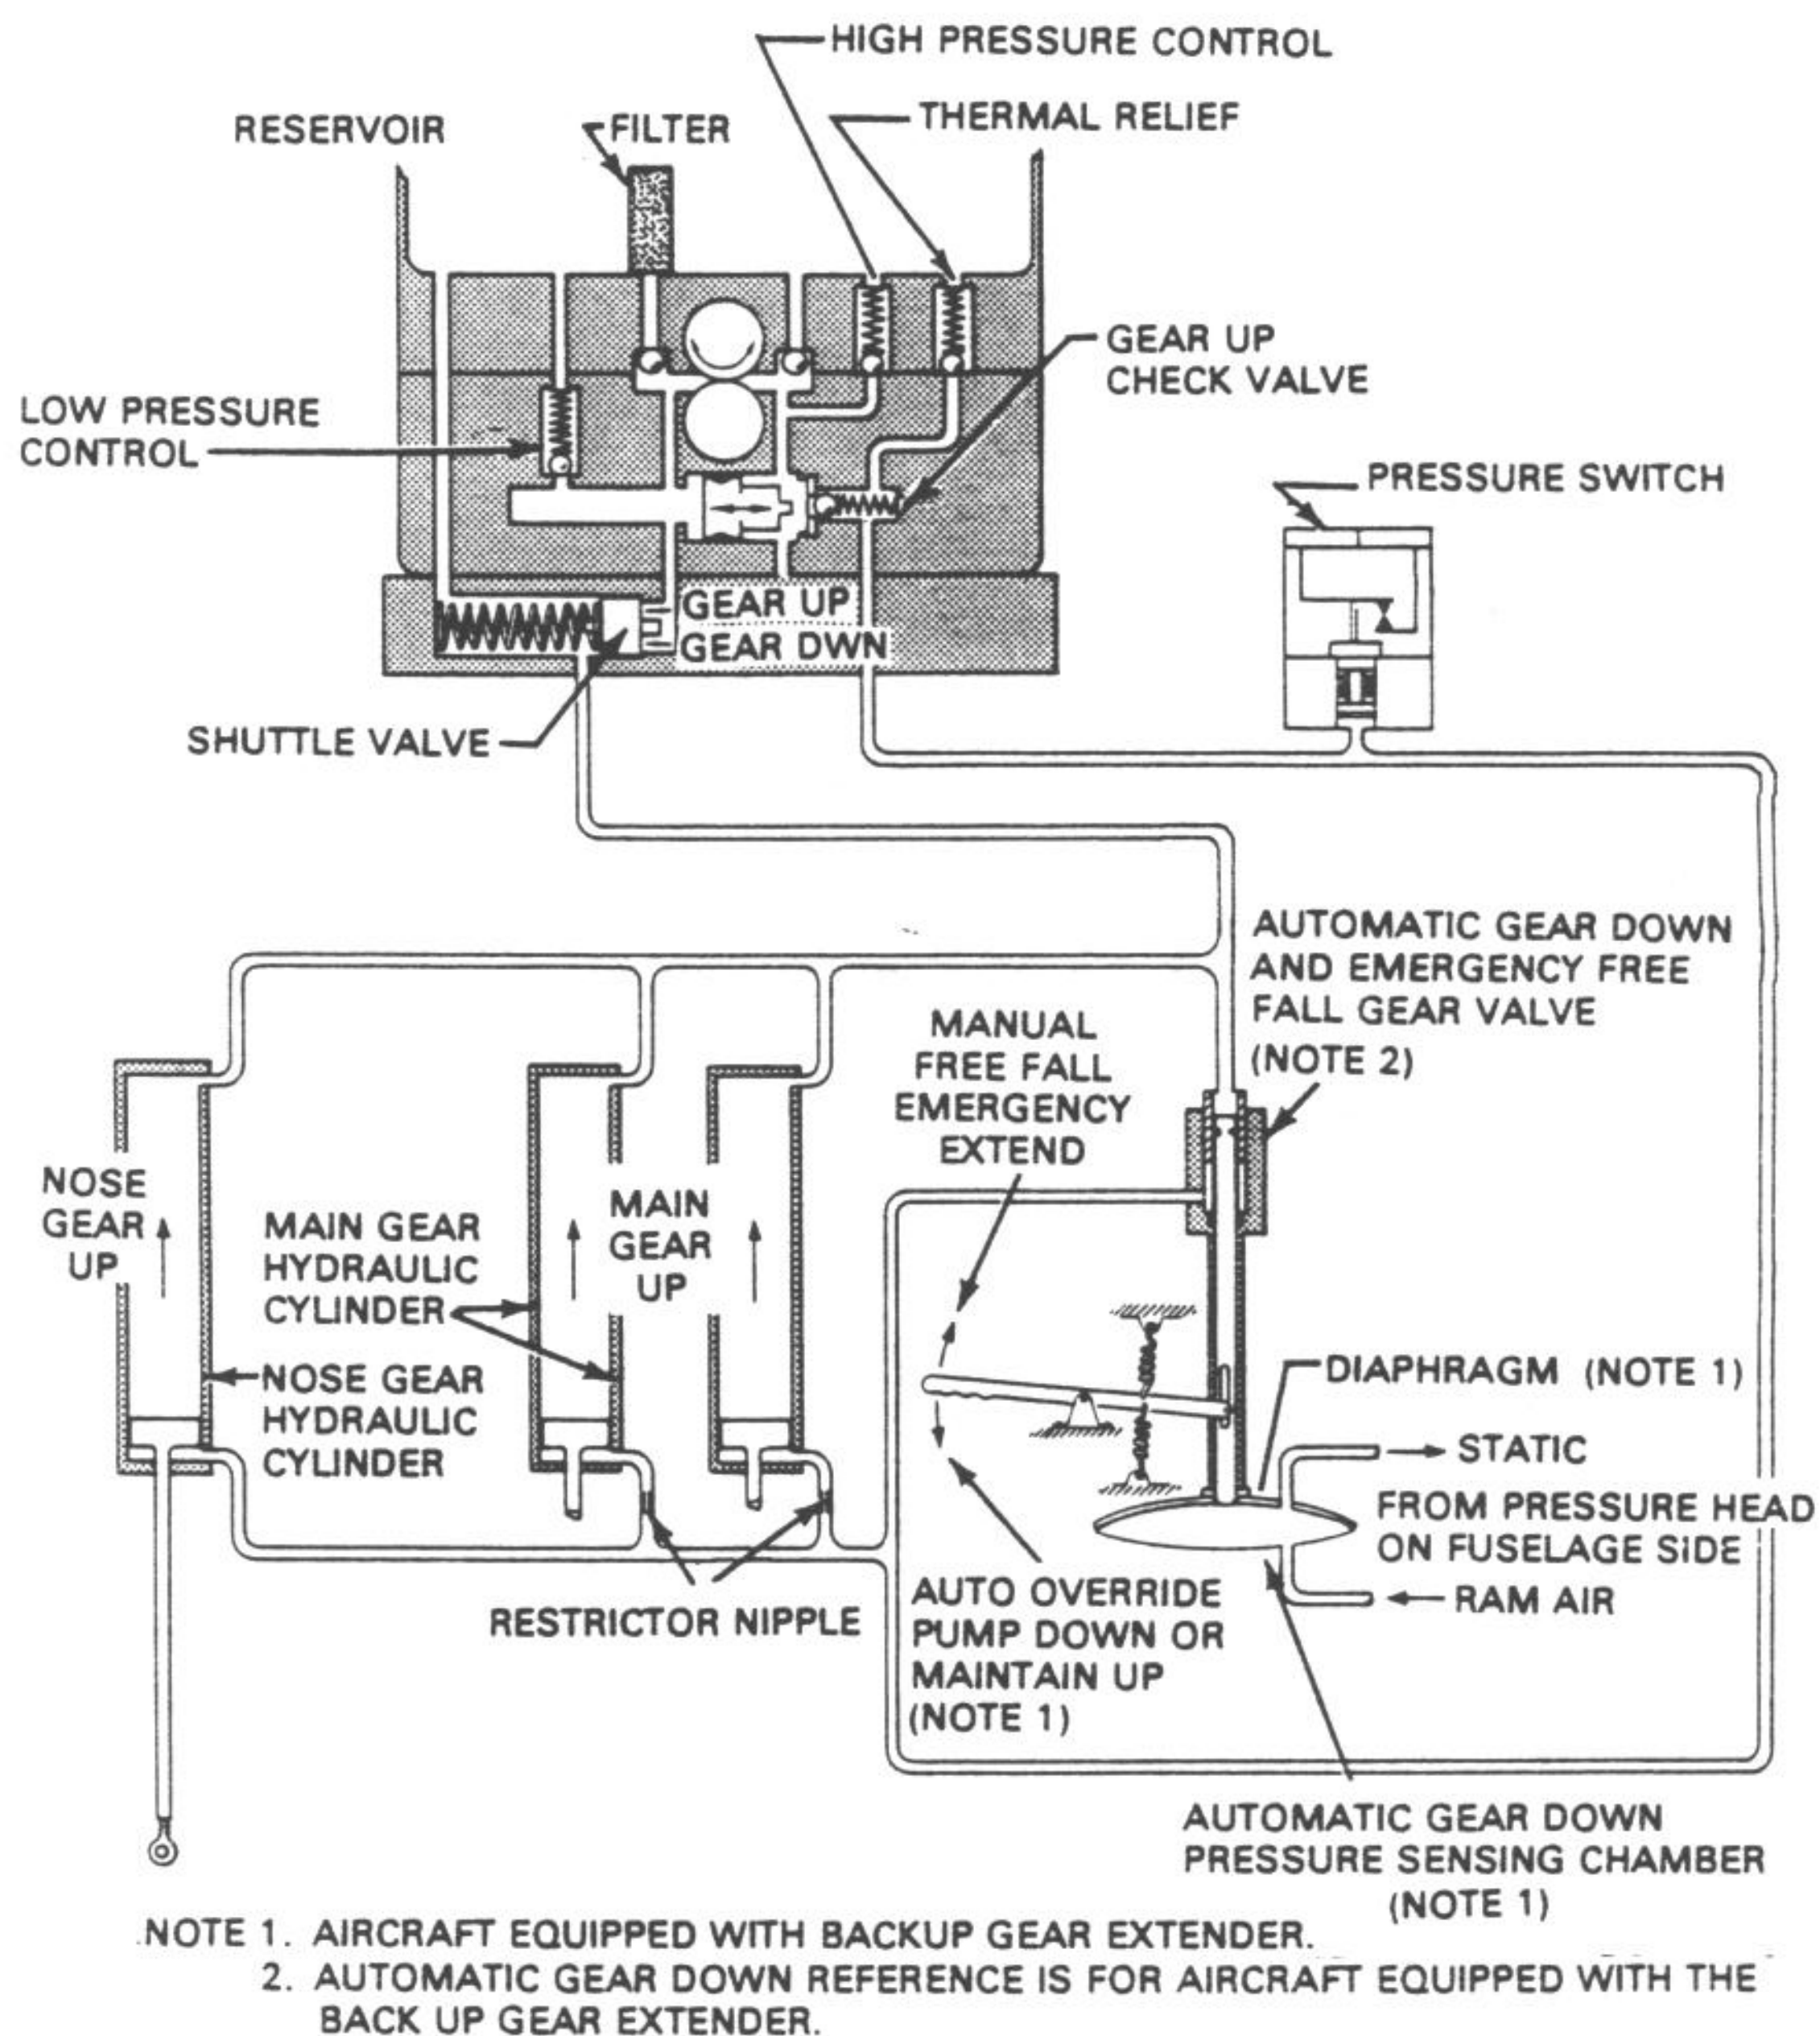

LANDING GEAR HYDRAULIC SYSTEM SCHEMATIC

Figure 7-7

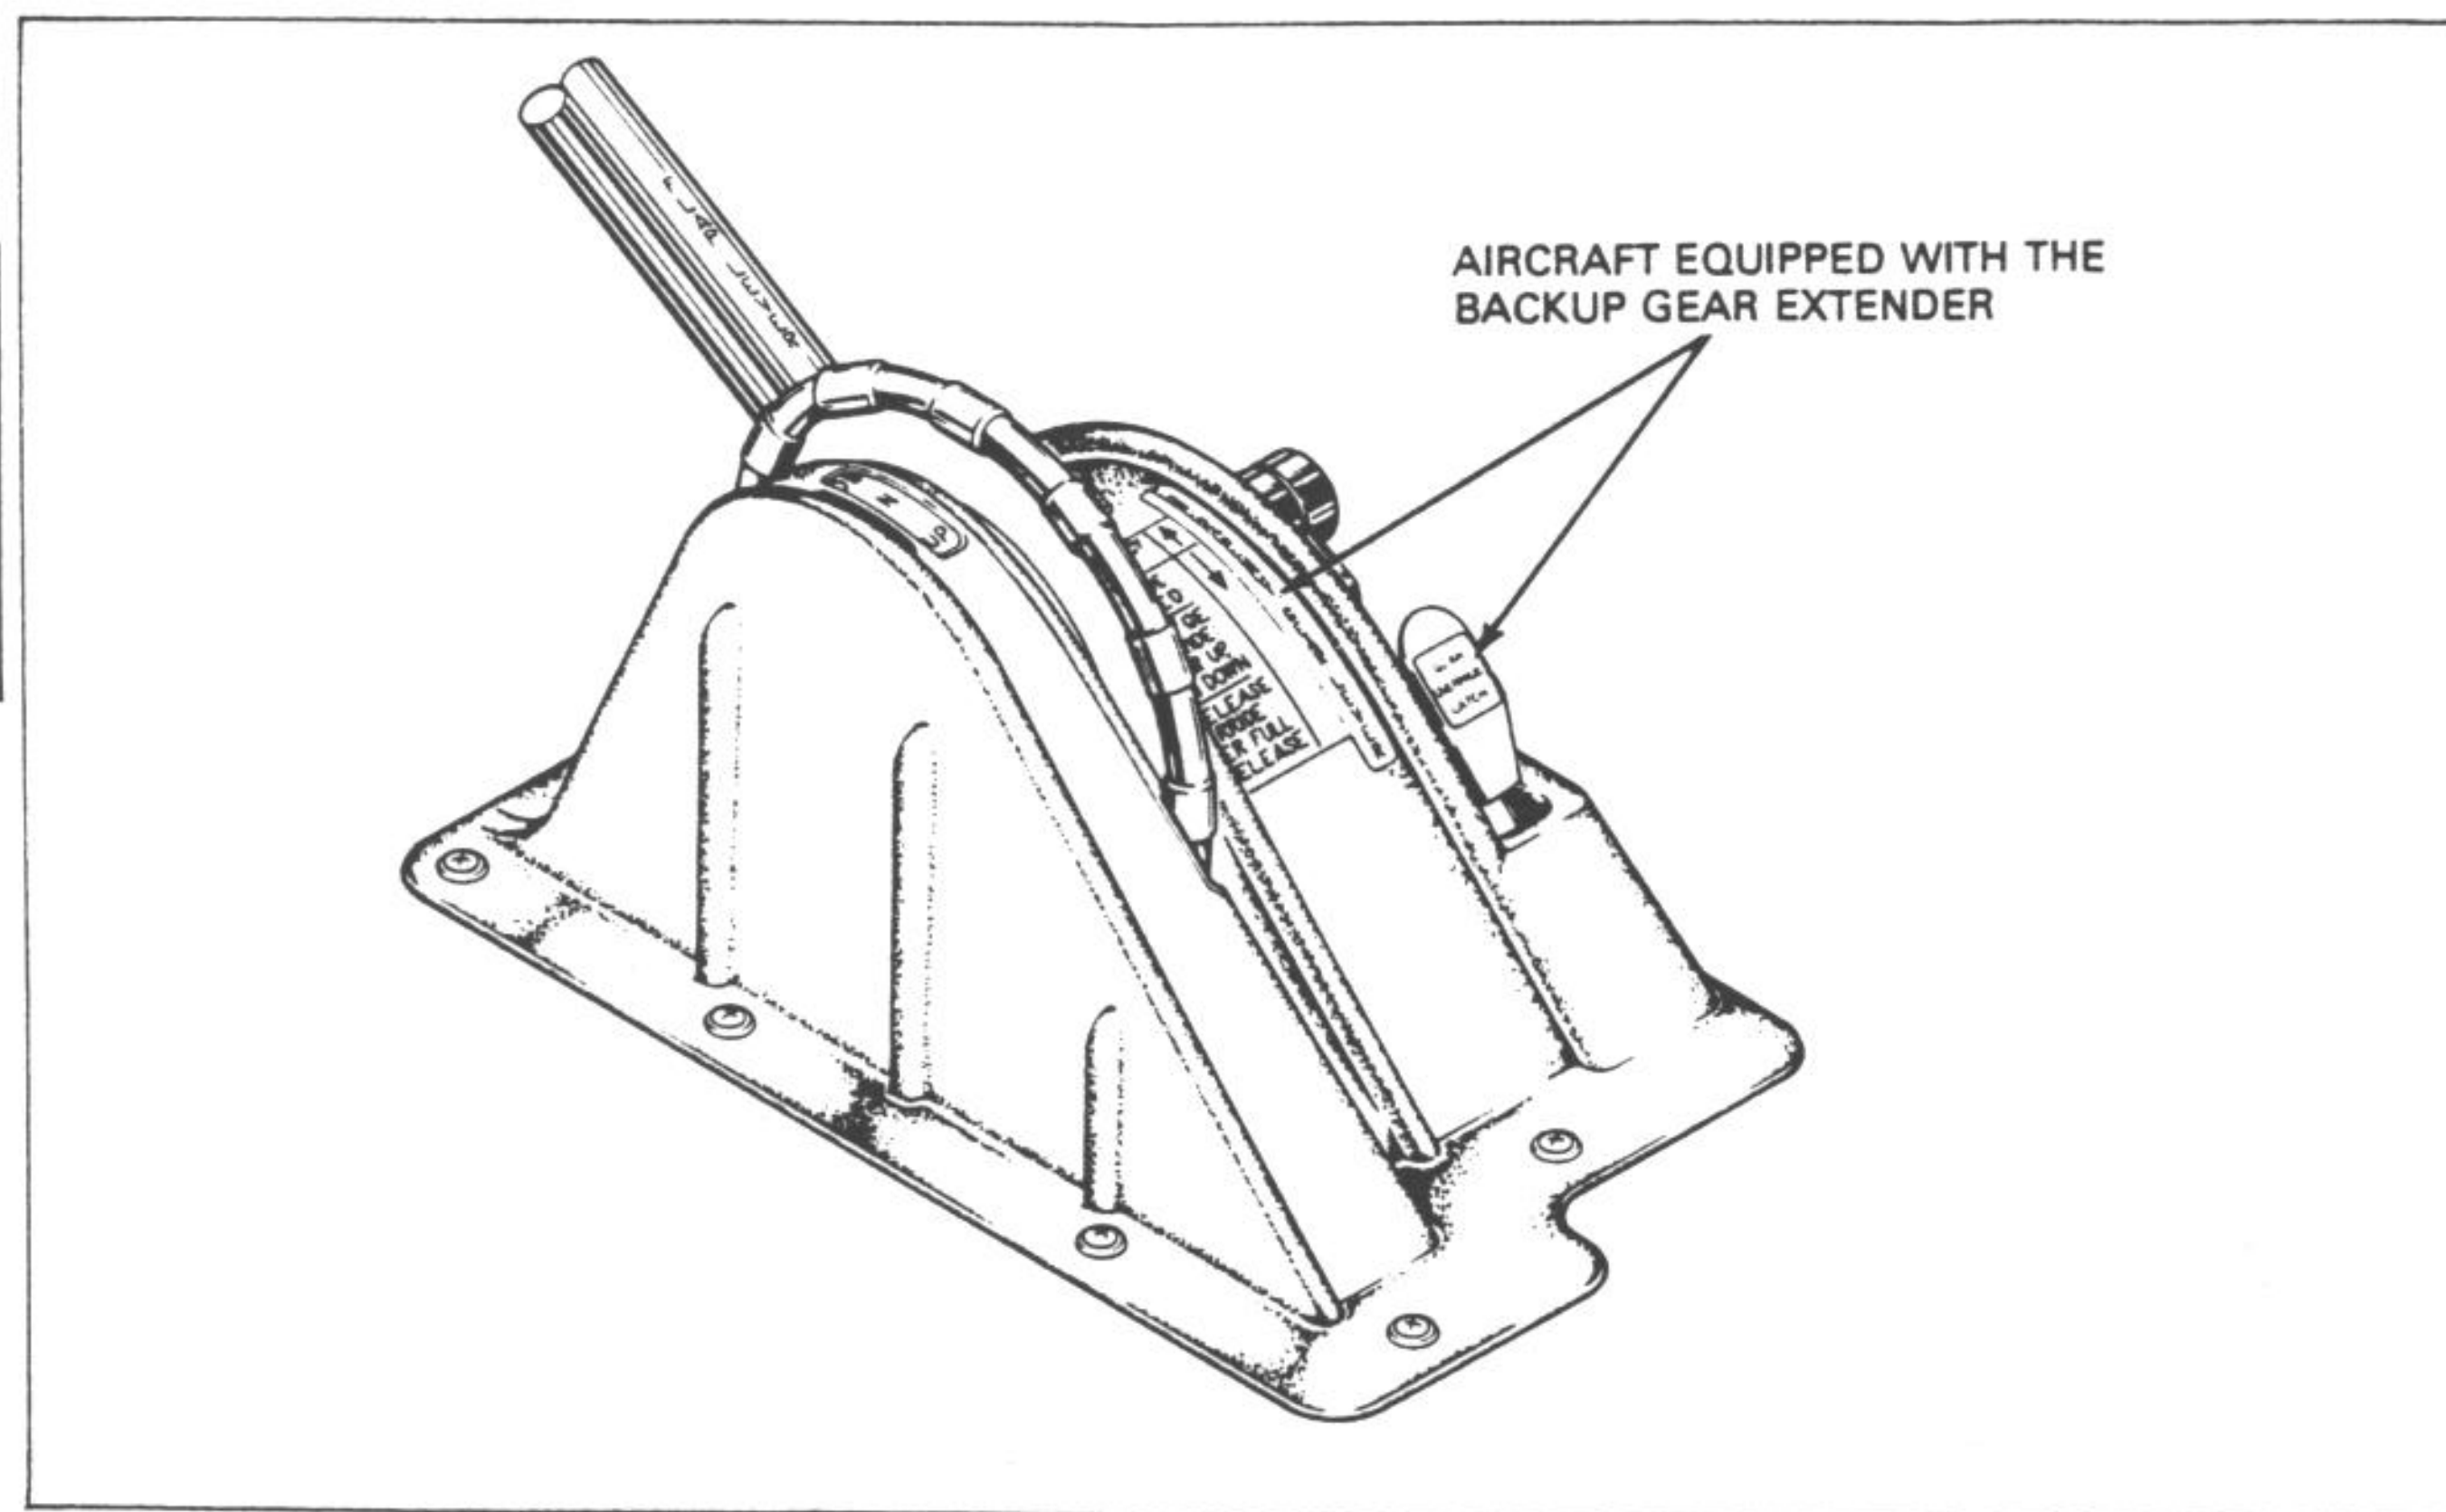

FLIGHT CONTROL CONSOLE

Figure 7-9

7.13 FLIGHT CONTROLS

Dual flight controls are provided as standard equipment. A cable system provides actuation of the control surfaces when the flight controls are moved in their respective directions.

The horizontal surface (stabilator) is of the flying tail design with a trim tab/servo mounted on the trailing edge. This tab serves the dual function of providing trim control and pitch control forces. The trim function is controlled by a trim control wheel located on the control console between the two front seats (Figure 7-9). Rotating the wheel forward gives nose down trim and rotation aft gives nose up trim. The stabilator provides extra stability and controllability with less area, drag and weight than conventional tail surfaces.

The rudder is conventional in design and incorporates a rudder trim. The trim mechanism is a spring-loaded recentering device. The trim control is located on the right side of the pedestal below the throttle quadrant. Turning the trim control clockwise gives nose right trim and counterclockwise rotation gives nose left trim.


Ailerons are provided with differential deflection. This feature reduces adverse yaw in turning maneuvers, and thus reducing the amount of coordination required.

Manually controlled flaps are provided. They are extended by a control cable and are spring-loaded to the retracted (up) position. The control is located between the two front seats on the control console. To extend the flaps pull the handle up to the desired flap setting of 10, 25 or 40 degrees. To retract, depress the button on the end of the handle and lower the control. A balanced control system is used for light operating forces.

When extending or retracting flaps, there is a pitch change in the aircraft. This pitch change can be corrected either by stabilator trim or increased control wheel force. When the flaps are in the retracted position the right flap, provided with a over-center lock mechanism, acts as a step.


NOTE

The right flap will support a load only in the fully retracted (up) position. When loading and unloading passengers make sure the flaps are in the retracted (up) position.

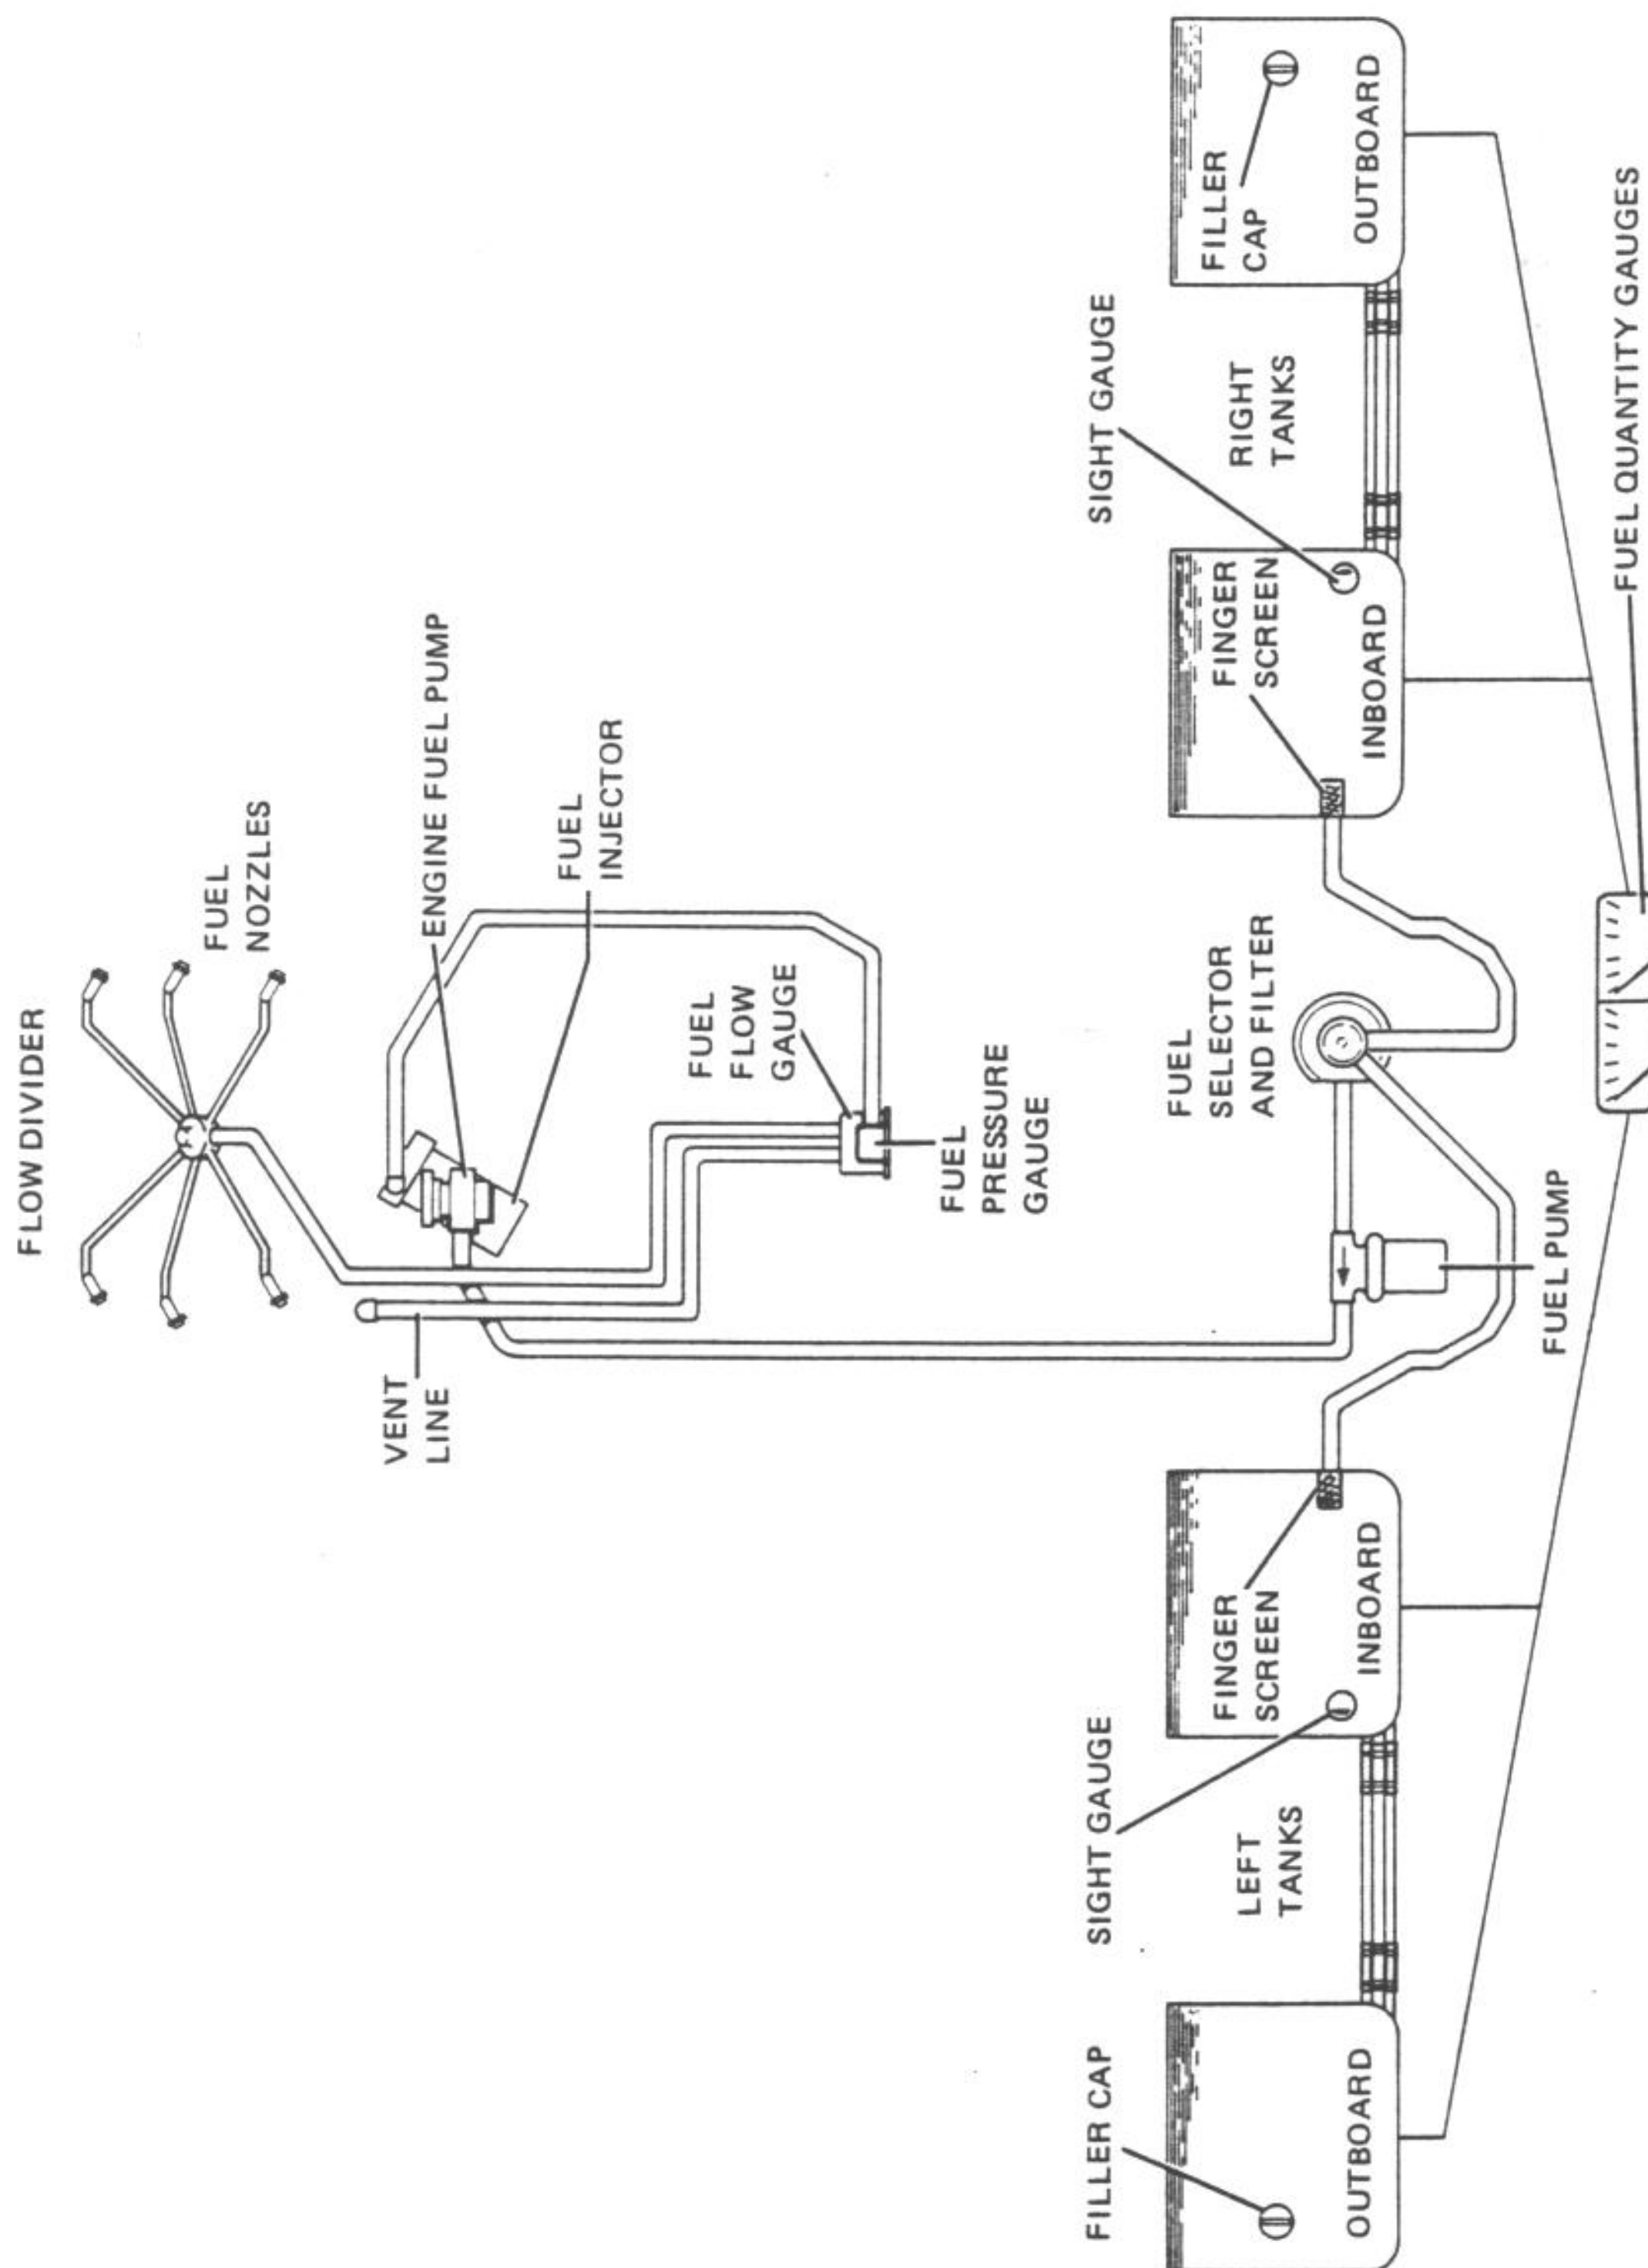

FUEL SYSTEM SCHEMATIC

Figure 7-11

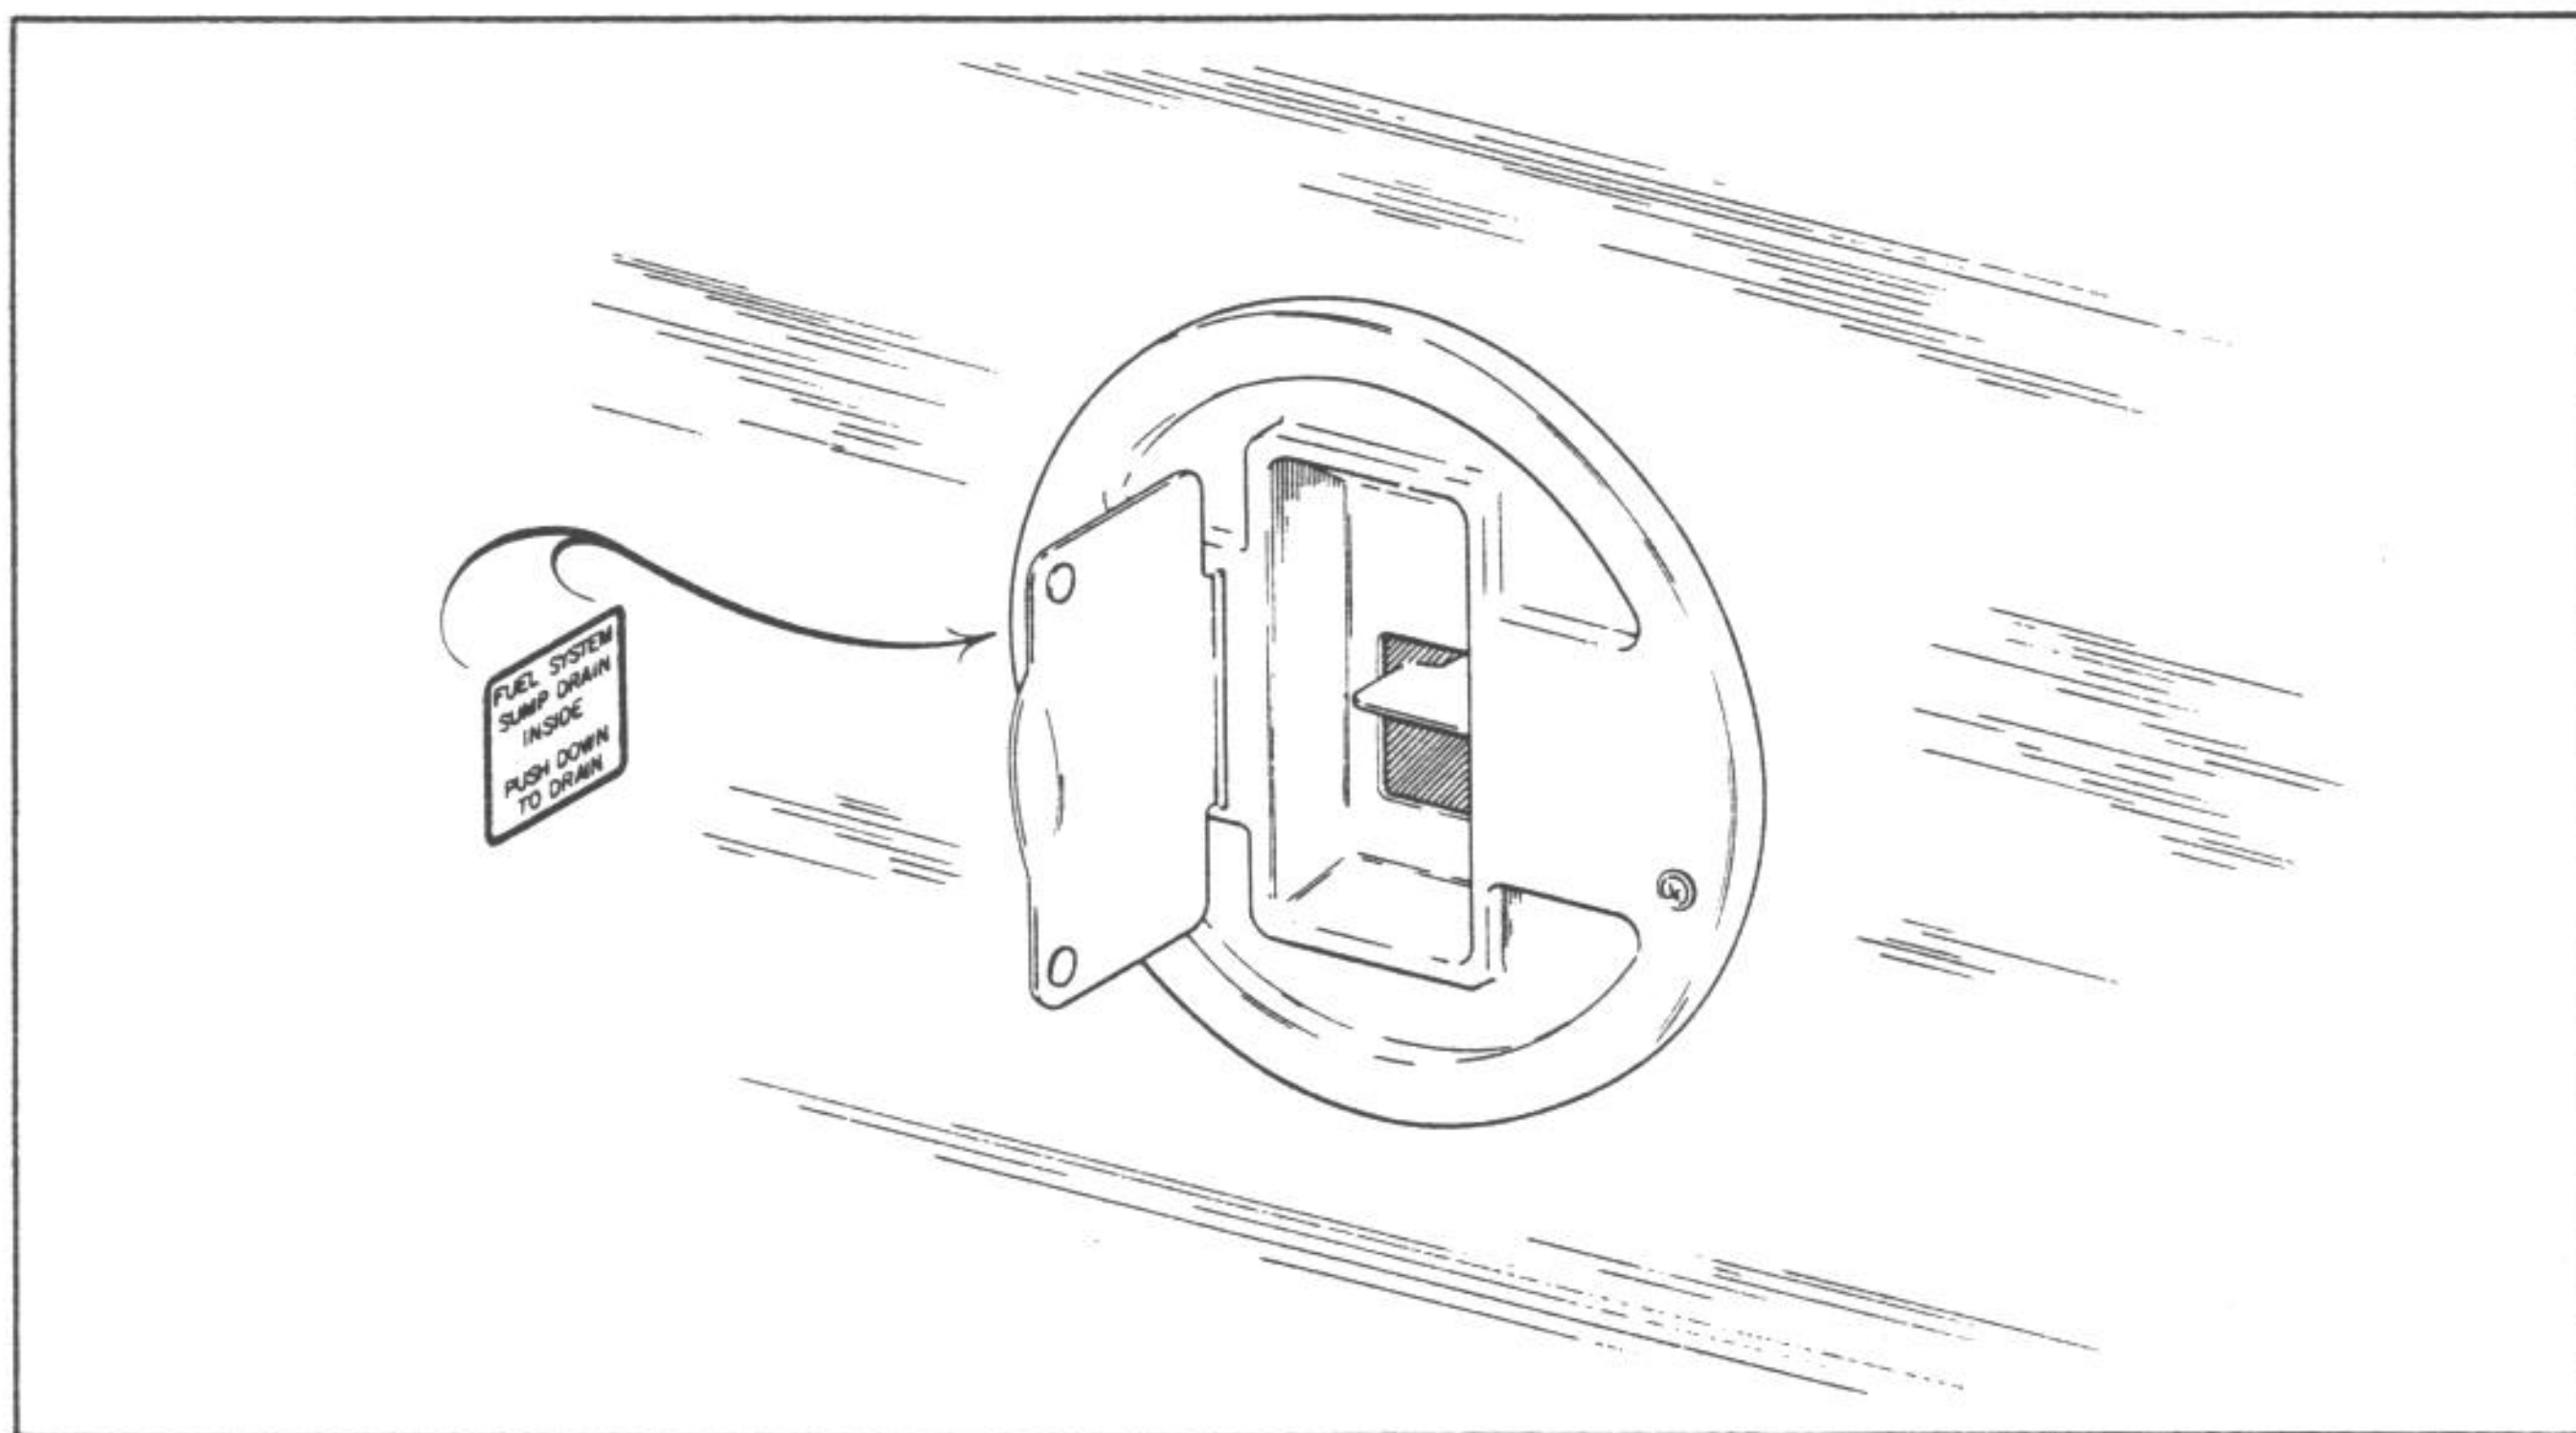

FUEL DRAIN LEVER

Figure 7-13

7.15 FUEL SYSTEM

The standard fuel capacity of the Cherokee Lance is 98 gallons, of which 94 gallons are usable. The tanks are attached to the wing structure with screws and nut plates and can be removed easily for service or inspection.

When using less than the standard 98 gallon capacity of the tanks, fuel should be distributed equally between each side.

The fuel selector control is located below the center of the instrument panel on the sloping face of the control tunnel (refer to Figure 7-1). It has three positions, one position corresponding to each wing tank plus an OFF position.

To avoid the accumulation of water and sediment, the fuel system should be drained daily prior to first flight and after refueling. Each tank is equipped with an individual quick drain located at the lower inboard rear corner of the tank. The fuel strainer and a system quick drain valve are located in the fuselage at the lowest point of the fuel system. It is important that the fuel system be drained in the following manner:

1. Drain each tank through its individual quick drain located at the lower inboard rear corner of the tank, making sure that enough fuel has flowed to ensure the removal of all water and sediment.
2. Place a container beneath the fuel sump drain outlet located under the fuselage. A special container is furnished for this operation.
3. Drain the fuel strainer by pressing down on the lever located on the right side of the cabin on the forward edge of the wing spar housing (Figure 7-13). Move the selector through the following sequence: OFF position, left, right, while draining the strainer. Make sure that enough fuel has flowed to drain the fuel line between each tank outlet and the fuel strainer, as well as the strainer itself. With full fuel tanks, it will take approximately 6 seconds to drain all of the fuel from the line from either tank to the fuel strainer. When the tanks are less than full, it will take a few seconds longer.
4. Examine the contents of the container placed under the fuel sump drain outlet. When the fuel flow is free of water and sediment, close the drain and dispose of the contents of the bottle.

CAUTION


When draining fuel, care should be taken to ensure that no fire hazard exists before starting the engine.

After using the underseat quick drain, check from the outside to make sure that it has closed completely and is not leaking.

Fuel quantity gauges for each of the tanks are located in the engine gauge cluster on the left side of the instrument panel. A fuel pressure indicator is also incorporated in the engine gauge cluster.

A fuel quantity indicator to measure the fuel not visible through the filler neck in each wing is installed in the inboard fuel tank. This gauge indicates usable fuel quantities from 5 gallons to 25 gallons in the ground attitude. The sole purpose of this gauge is to assist the pilot in determining fuel quantities of less than 25 gallons during the preflight inspection.

An electric fuel pump is provided for use in case of failure of the engine driven pump. The electric pump operates from a single switch and independent circuit protector. It should be ON for all takeoffs and landings.

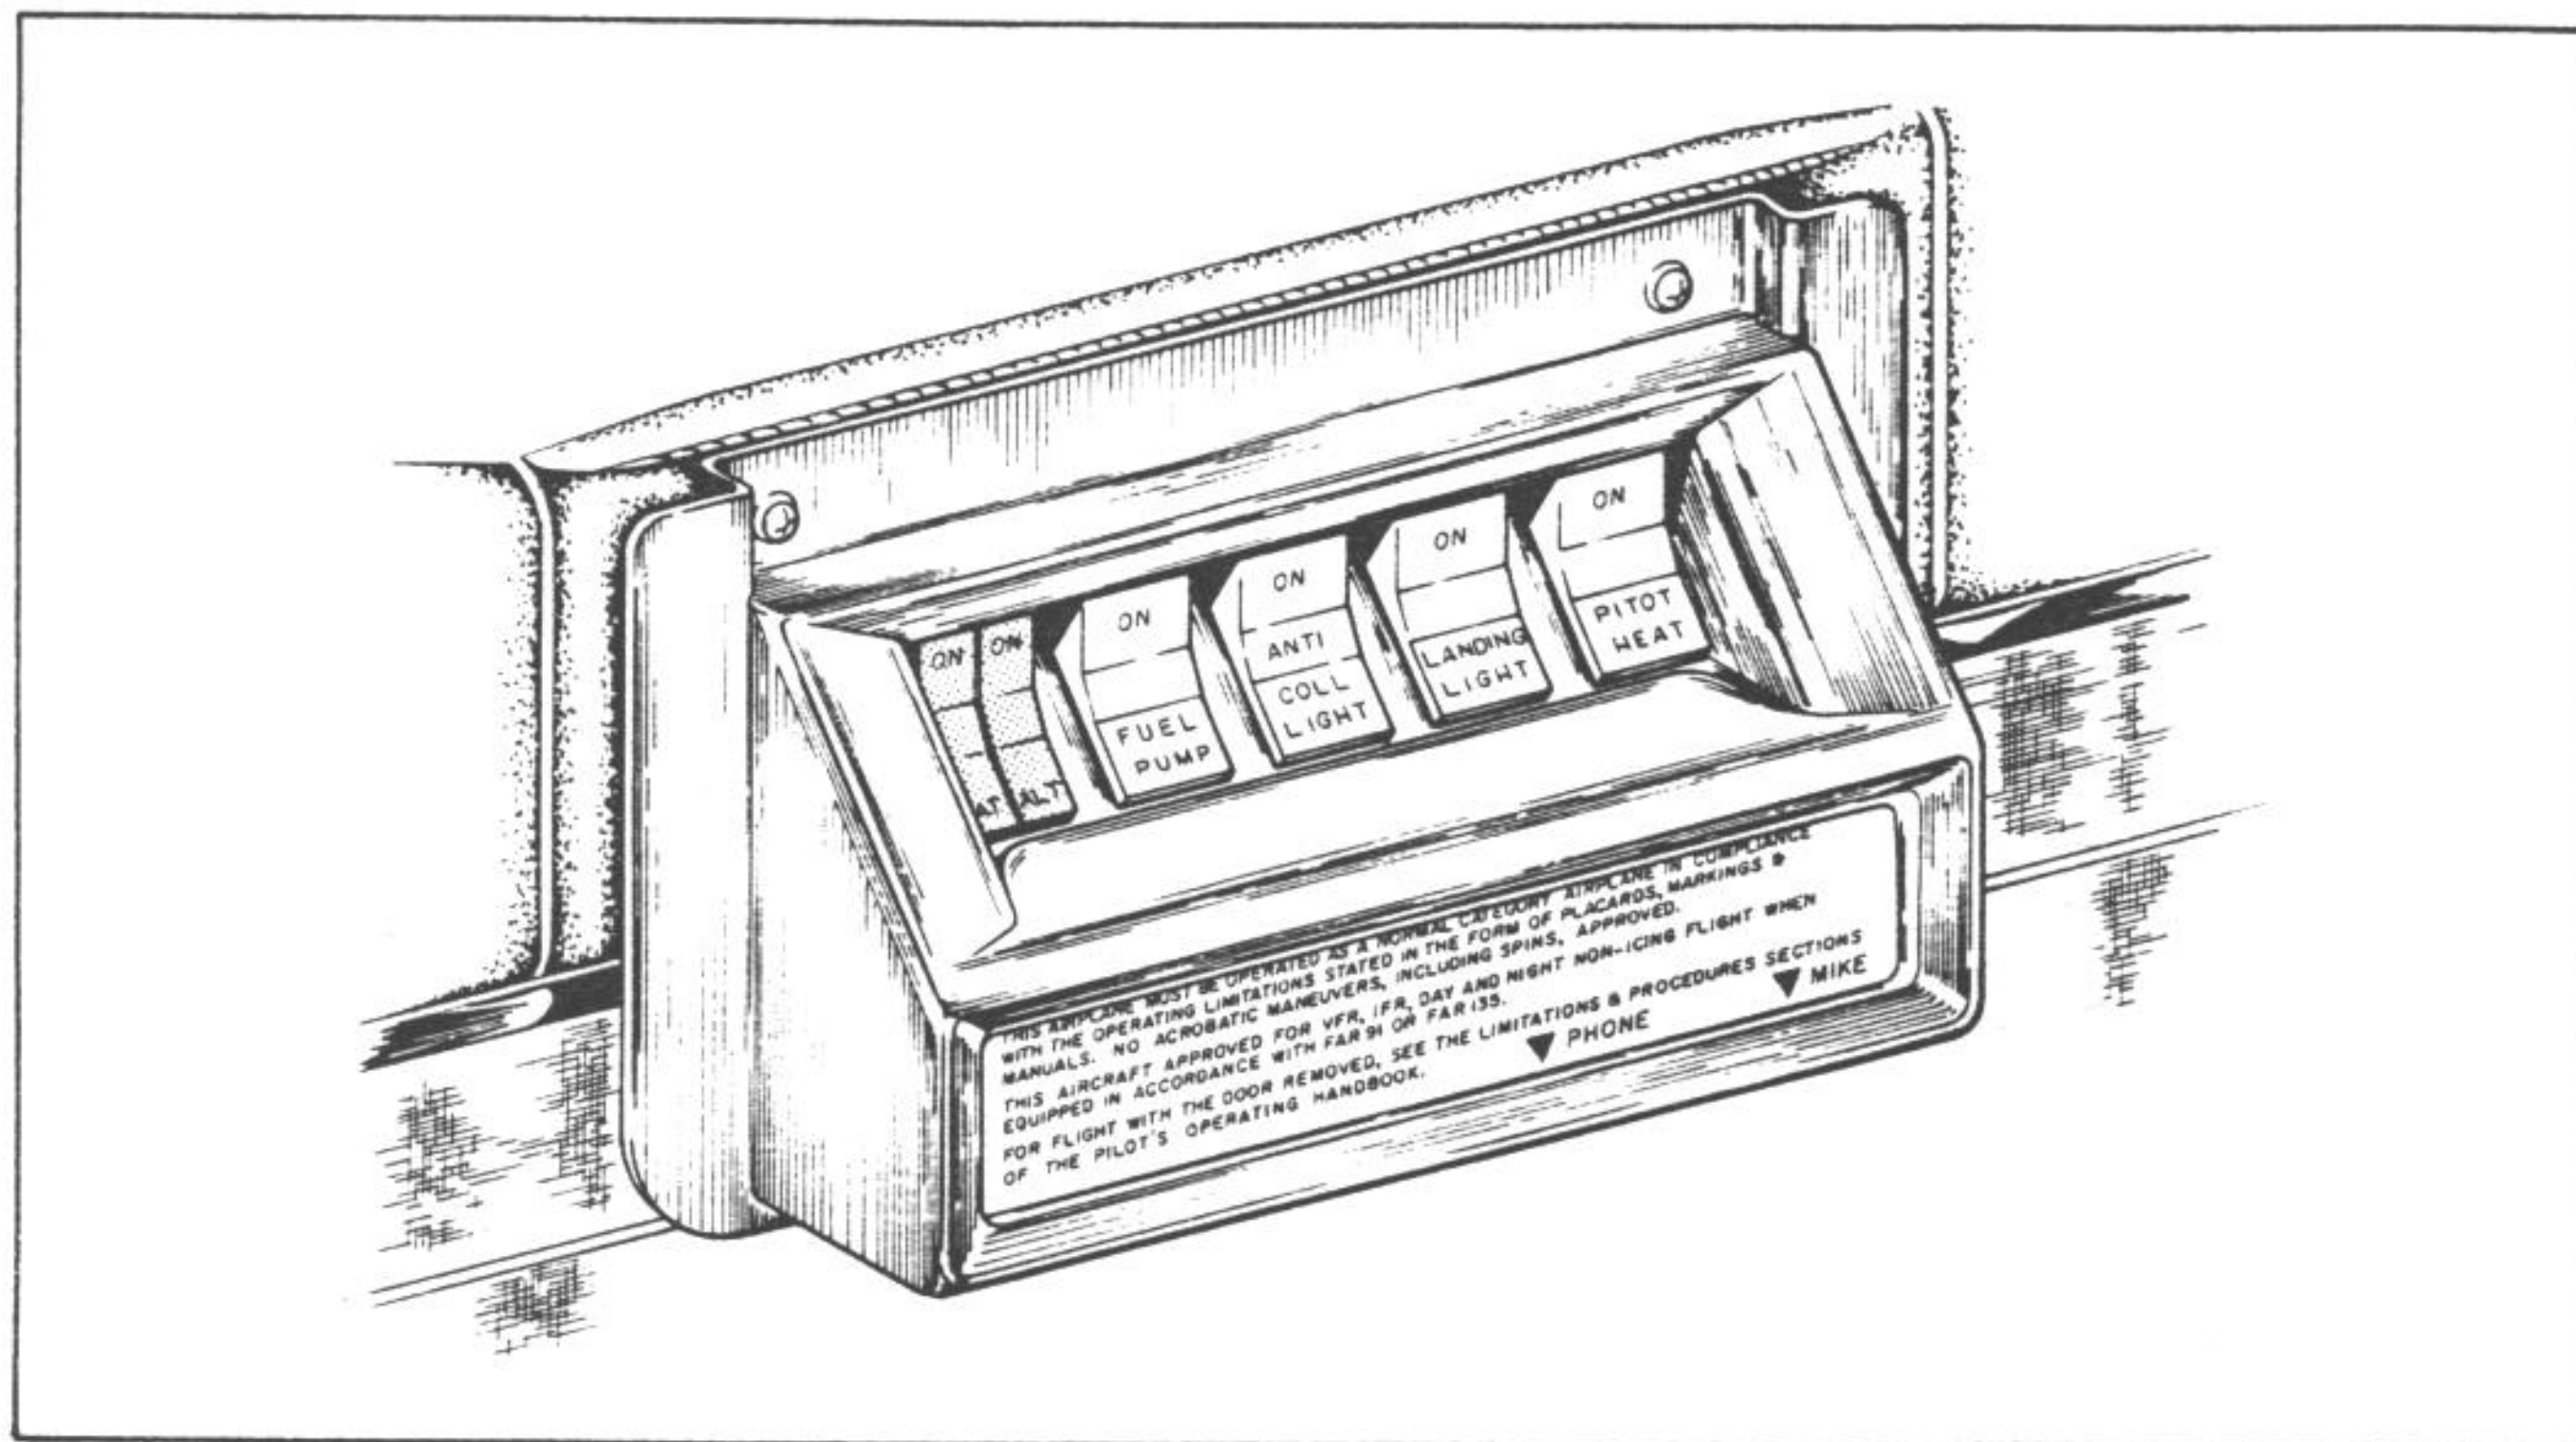

SWITCH PANEL

Figure 7-15


7.17 ELECTRICAL SYSTEM

The 14-volt electrical system includes a 12-volt battery for starting and to back up alternator output. Electrical power is supplied by a 60 ampere alternator. The battery, a master switch relay, a voltage regulator and an overvoltage relay are located beneath the floor of the forward baggage compartment. Access to these electrical components is gained by removing the compartment floor and the access panel located on the left side of the forward fuselage.

Electrical switches are located on a panel to the pilot's left (Figure 7-15) and all circuit breakers are on the lower right instrument panel (refer to Figure 7-19). Two thumb-wheel rheostat switches to the left of the circuit breakers control the navigation lights and the intensity of the instrument panel lights.

Standard electrical accessories include the starter, the electric fuel pump, the stall warning indicator, the cigar lighter, the ammeter, and the annunciator panel.

The annunciator panel includes alternator and low oil pressure indicator lights. When the optional gyro system is installed, the annunciator panel also includes a low vacuum indicator light. The annunciator panel lights are provided only as a warning to the pilot that a system may not be operating properly, and that he should check and monitor the applicable system gauge to determine when or if any necessary action is required.

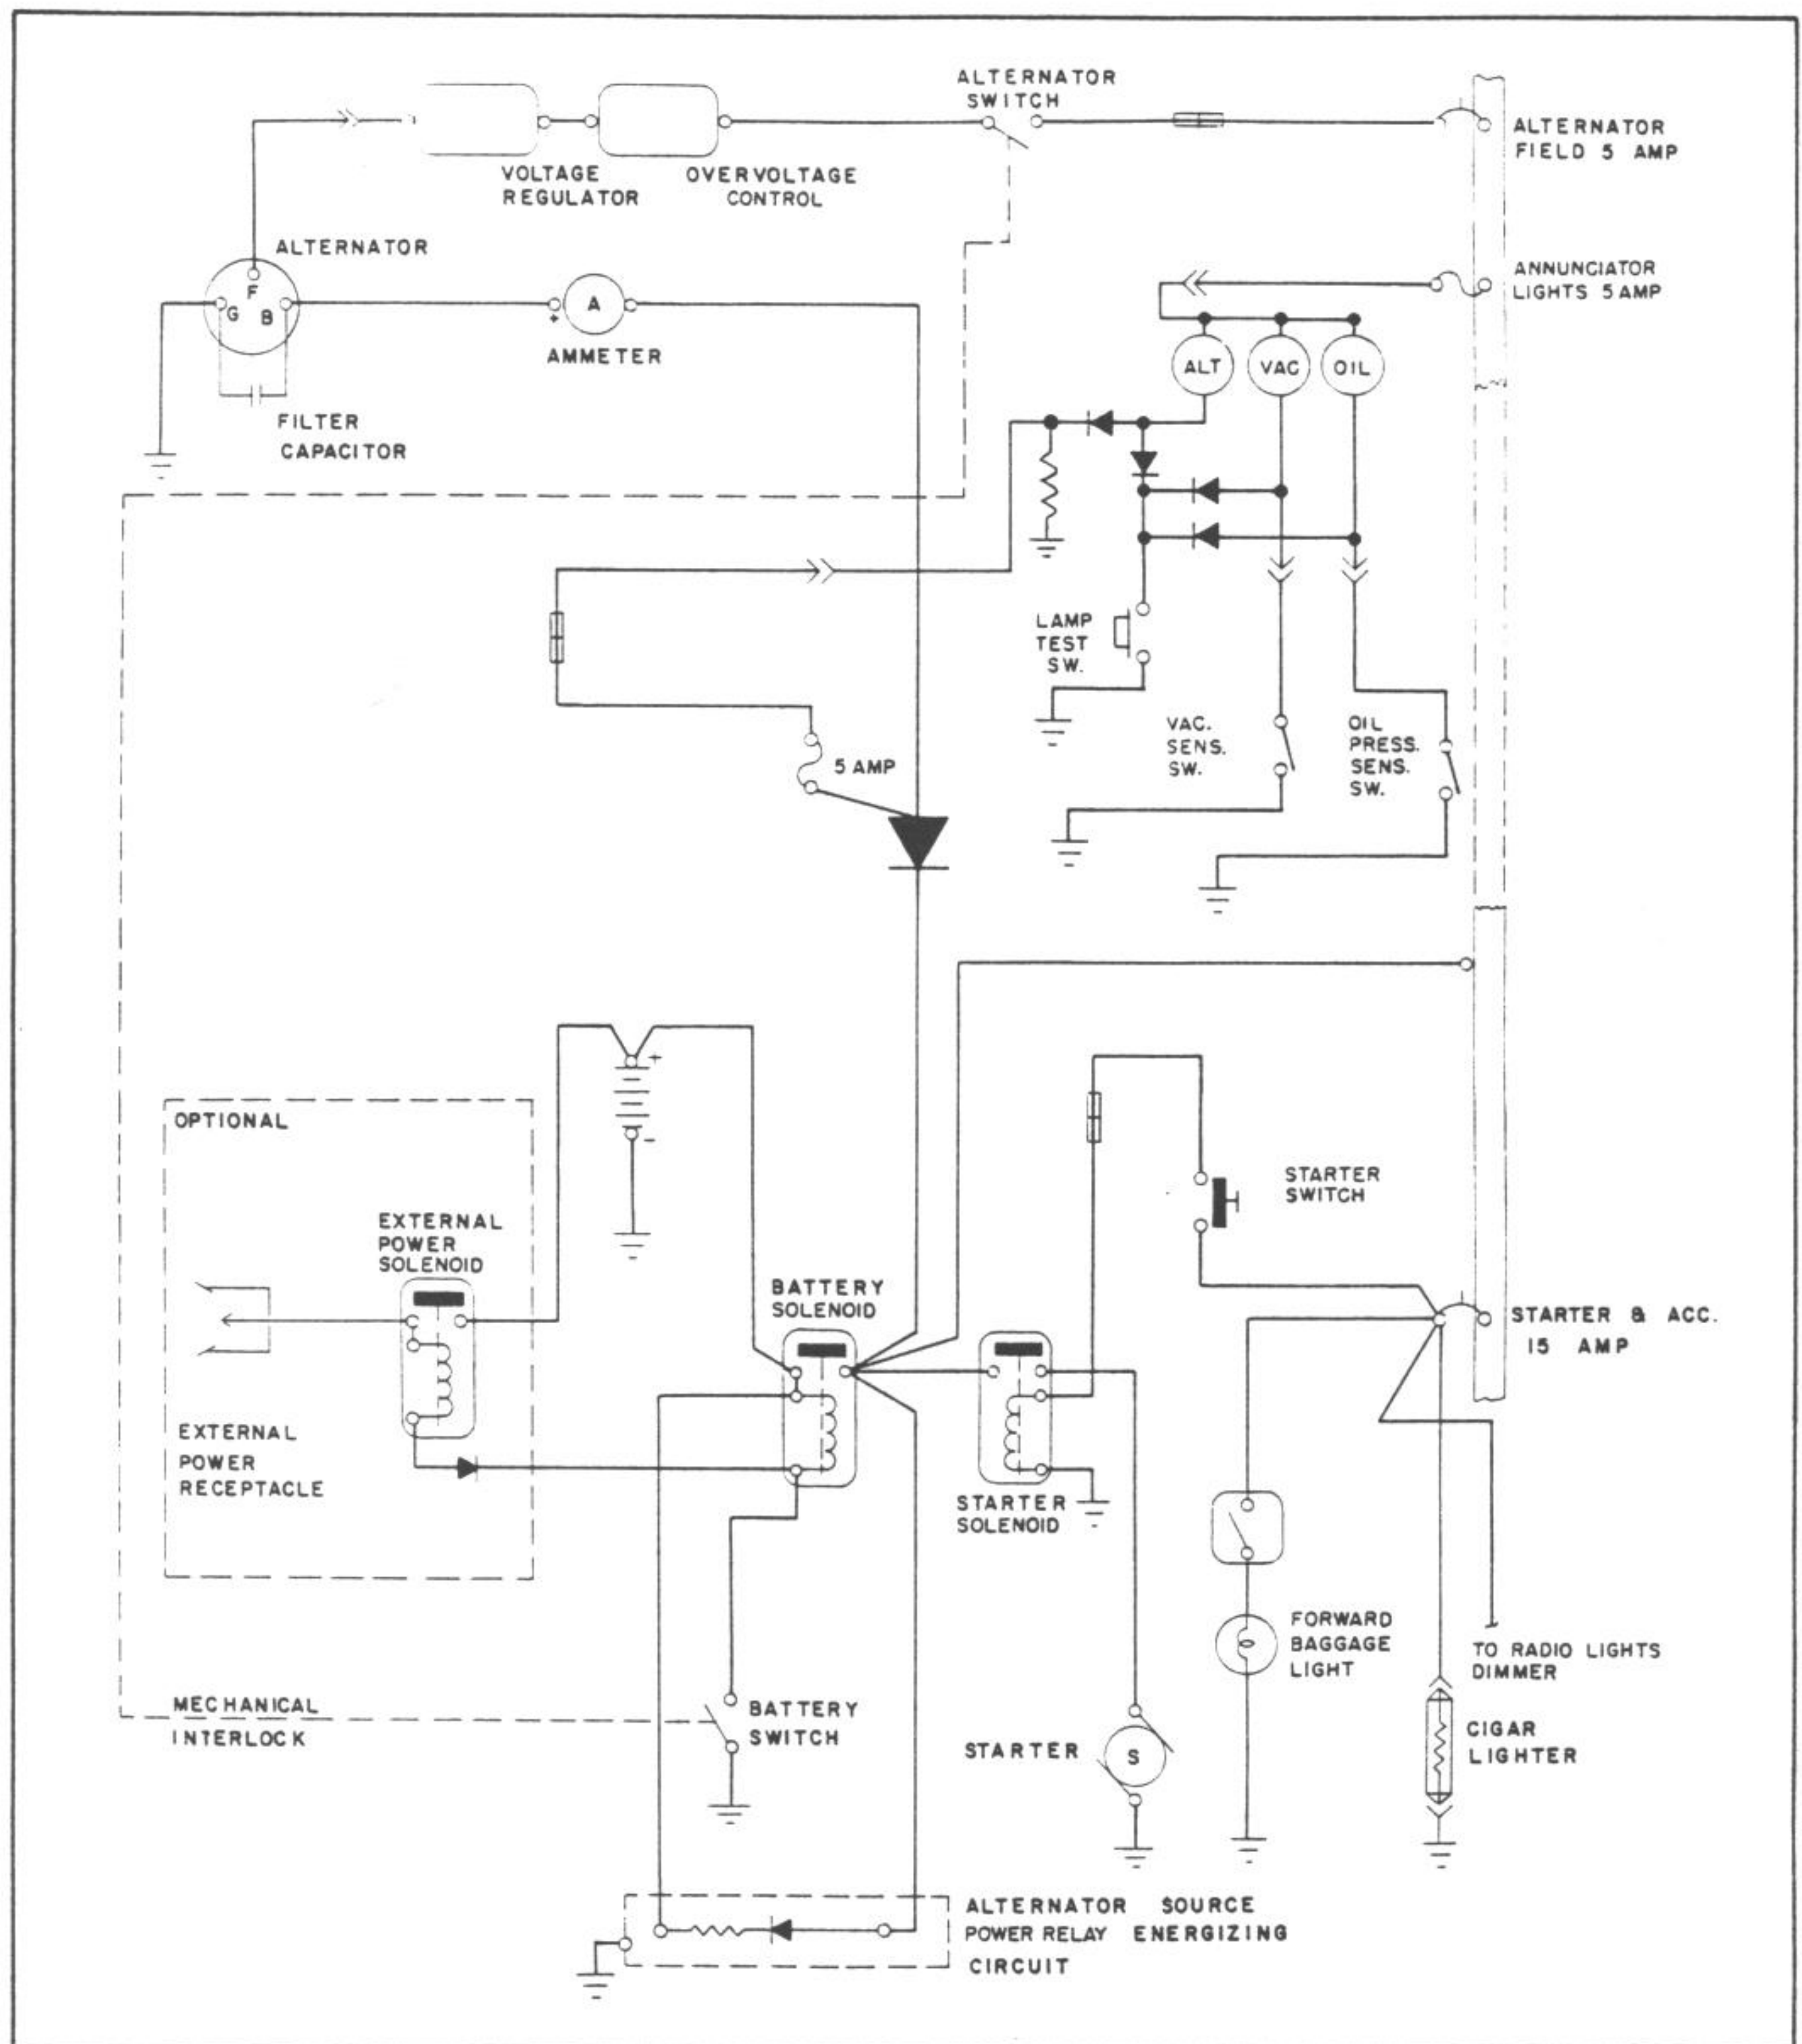

ALTERNATOR AND STARTER SCHEMATIC

Figure 7-17

Optional electrical accessories include the navigation lights, anti-collision strobe lights and instrument panel lighting.

Circuit provisions are made to handle a full complement of communications and navigational equipment.

The alternator system offers many advantages over a generator system. The main advantage is full electrical power output at much lower engine speed, which results in improved radio and electrical equipment operation. Since the alternator output is available all the time, the battery will be charging almost continuously. This will make cold weather starting easier.

The ammeter in the alternator system displays in amperes the load placed on the alternator. It does not indicate battery discharge. With all electrical equipment off (except the master switch) the ammeter will be indicating the amount of charging current demanded by the battery. As each item of electrical equipment is turned on, the current will increase to a total appearing on the ammeter. This total includes the battery. The maximum continuous load for night flight, with radios on, is about 30 amperes. This 30 ampere value, plus approximately 2 amperes for a fully charged battery, will appear continuously under these flight conditions.


The master switch is a split switch with the left half operating the master relay and the right half energizing the alternator. This switch is interlocked so that the alternator cannot be operated without the battery. For normal operation, be sure that both halves are turned on.

Maintenance on the alternator should prove to be a minor factor. Should service be required, contact a Piper Dealer.

WARNINGS

When optional panel lights are installed, radio dimming switch must be off to obtain gear lights full intensity during daytime flying. When aircraft is operated at night and panel light radio dimming switch is turned on, gear lights will automatically dim.

Anti-collision lights should not be operating when flying through clouds, fog or haze, since reflected light can produce spatial disorientation. Strobe lights should not be used in close proximity to the ground, such as during taxiing, takeoff or landing.

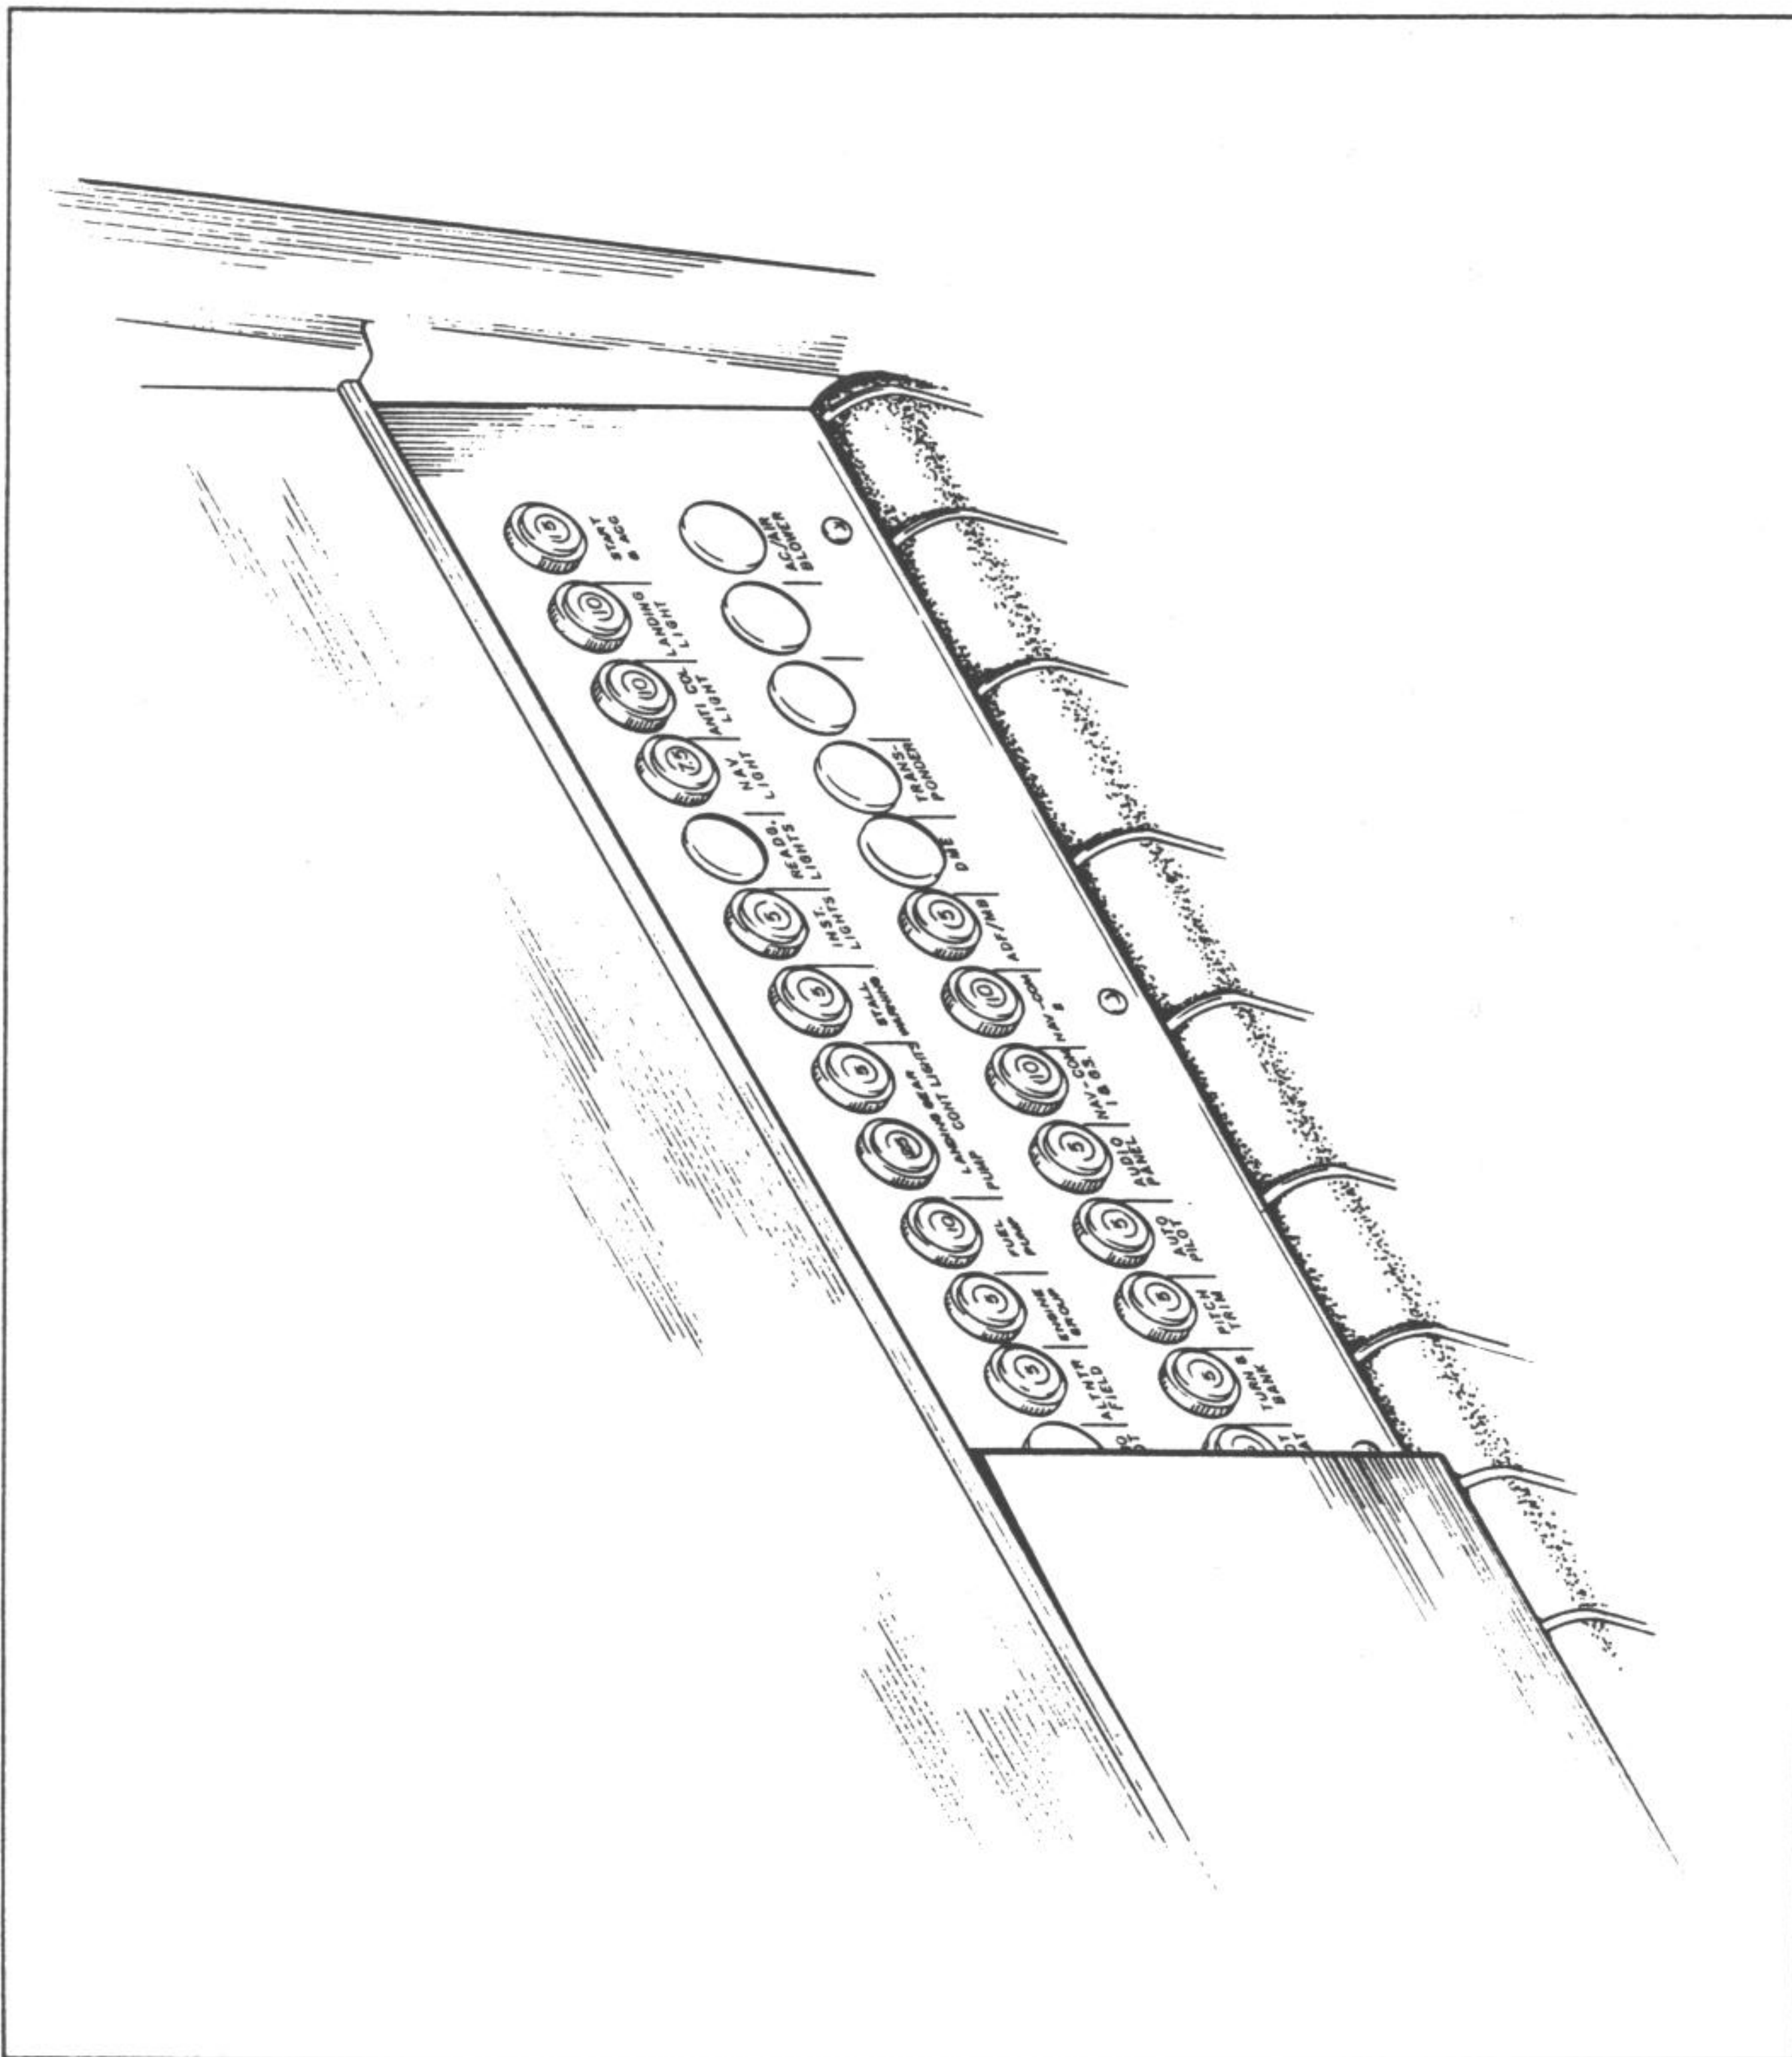

CIRCUIT BREAKER PANEL

Figure 7-19


7.19 VACUUM SYSTEM

The vacuum system is designed to operate the air driven gyro instruments. This includes the directional and attitude gyros when installed. The system consists of an engine driven vacuum pump, a vacuum regulator, a filter and the necessary plumbing.

The vacuum pump is a dry type pump which eliminates the need for an air/oil separator and its plumbing. A shear drive protects the pump from damage. If the drive shears the gyros will become inoperative.

The vacuum gauge, mounted on the right instrument panel to the right of the radios, (refer to Figure 7-21) provides valuable information to the pilot about the operation of the vacuum system. A decrease in pressure in a system that has remained constant over an extended period, may indicate a dirty filter, dirty screens, possibly a sticking vacuum regulator or leak in system (a low vacuum indicator light is provided in the annunciator panel). Zero pressure would indicate a sheared pump drive, defective pump, possibly a defective gauge or collapsed line. In the event of any gauge variation from the norm, the pilot should have a mechanic check the system to prevent possible damage to the system components or eventual failure of the system.

A vacuum regulator is provided in the system to protect the gyros. The valve is set so the normal vacuum reads $5.0 \pm .1$ inches of mercury, a setting which provides sufficient vacuum to operate all the gyros at their rated RPM. Higher settings will damage the gyros and with a low setting the gyros will be unreliable. The regulator is located behind the instrument panel.

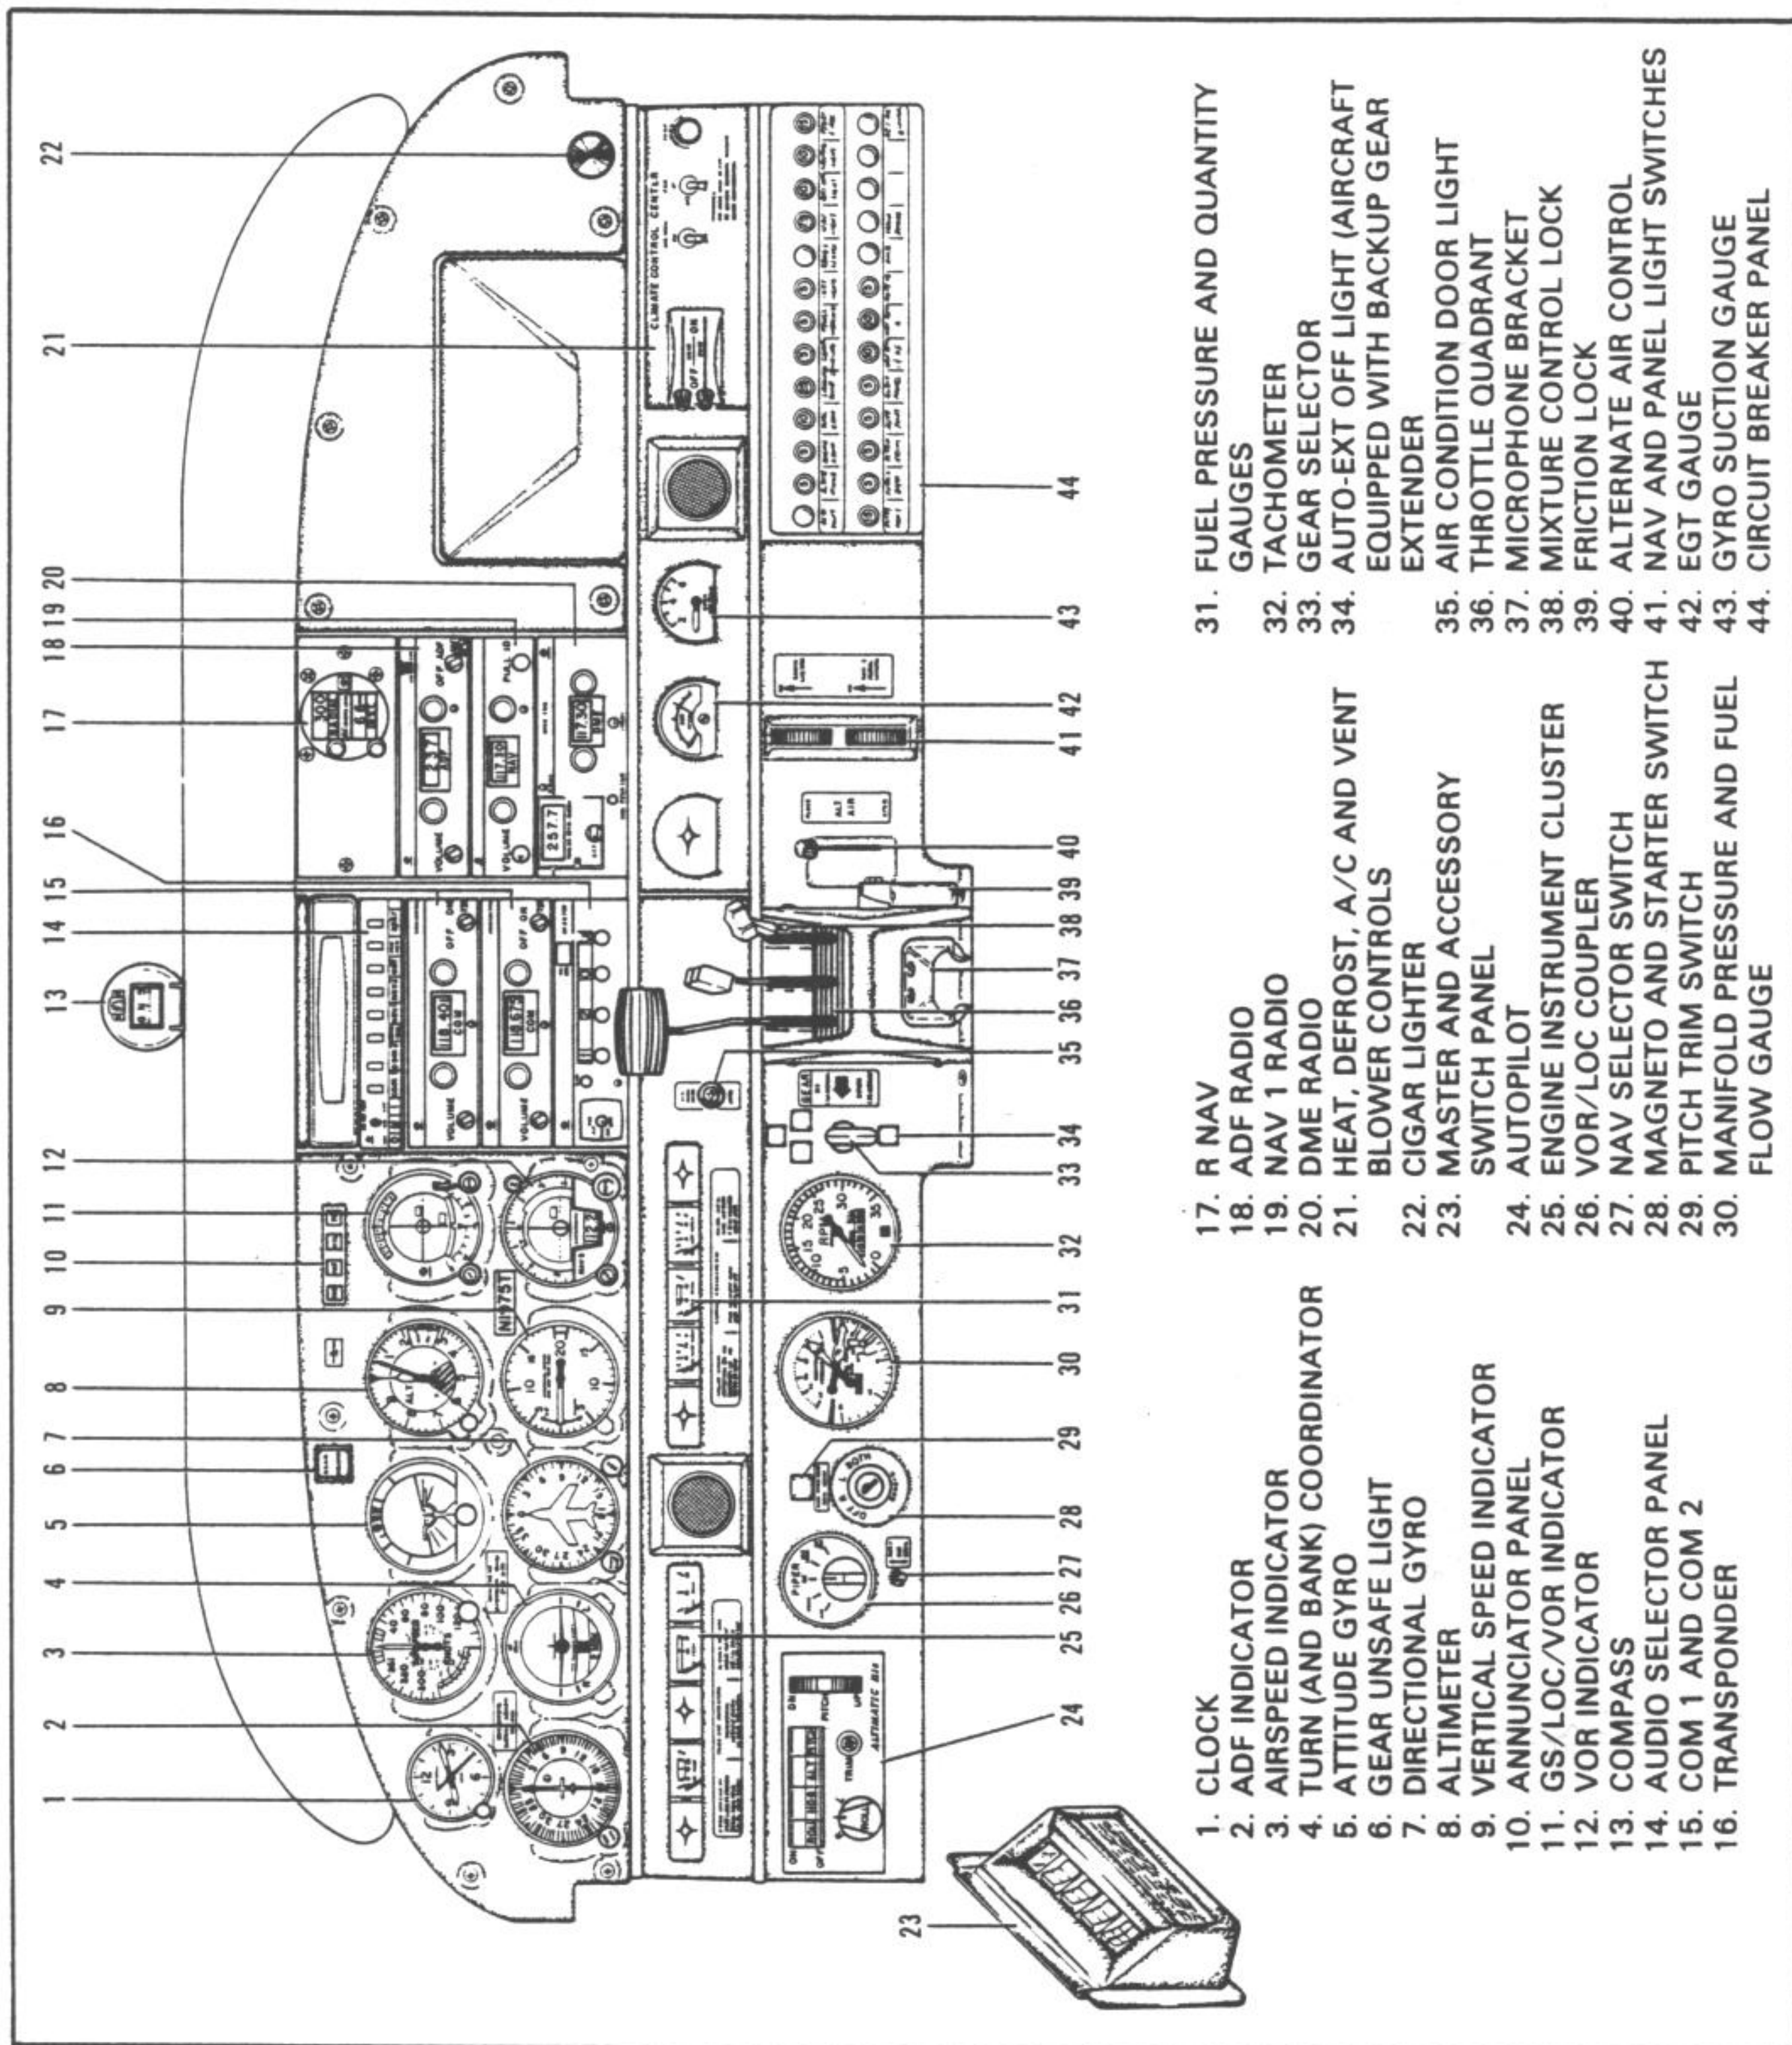


INSTRUMENT PANEL
Figure 7-21

7.21 INSTRUMENT PANEL

The instrument panel of the Cherokee Lance is designed to accommodate the customary advanced flight instruments and the normally required power plant instruments. The artificial horizon and directional gyro are vacuum operated and are located in the center of the left hand instrument panel. The vacuum gauge is located on the right hand instrument panel. The turn indicator, on the left side, is electrically operated.

A natural separation of the flight group and the power group is achieved by the placement of the flight group in the upper instrument panel and the power group in the center and lower instrument panels. The radios are located in the center section of the panel, and the circuit breakers are in the lower right corner of the panel.

An annunciator panel is mounted in the upper instrument panel to warn the pilot of a possible malfunction in the alternator, oil pressure, or vacuum systems.

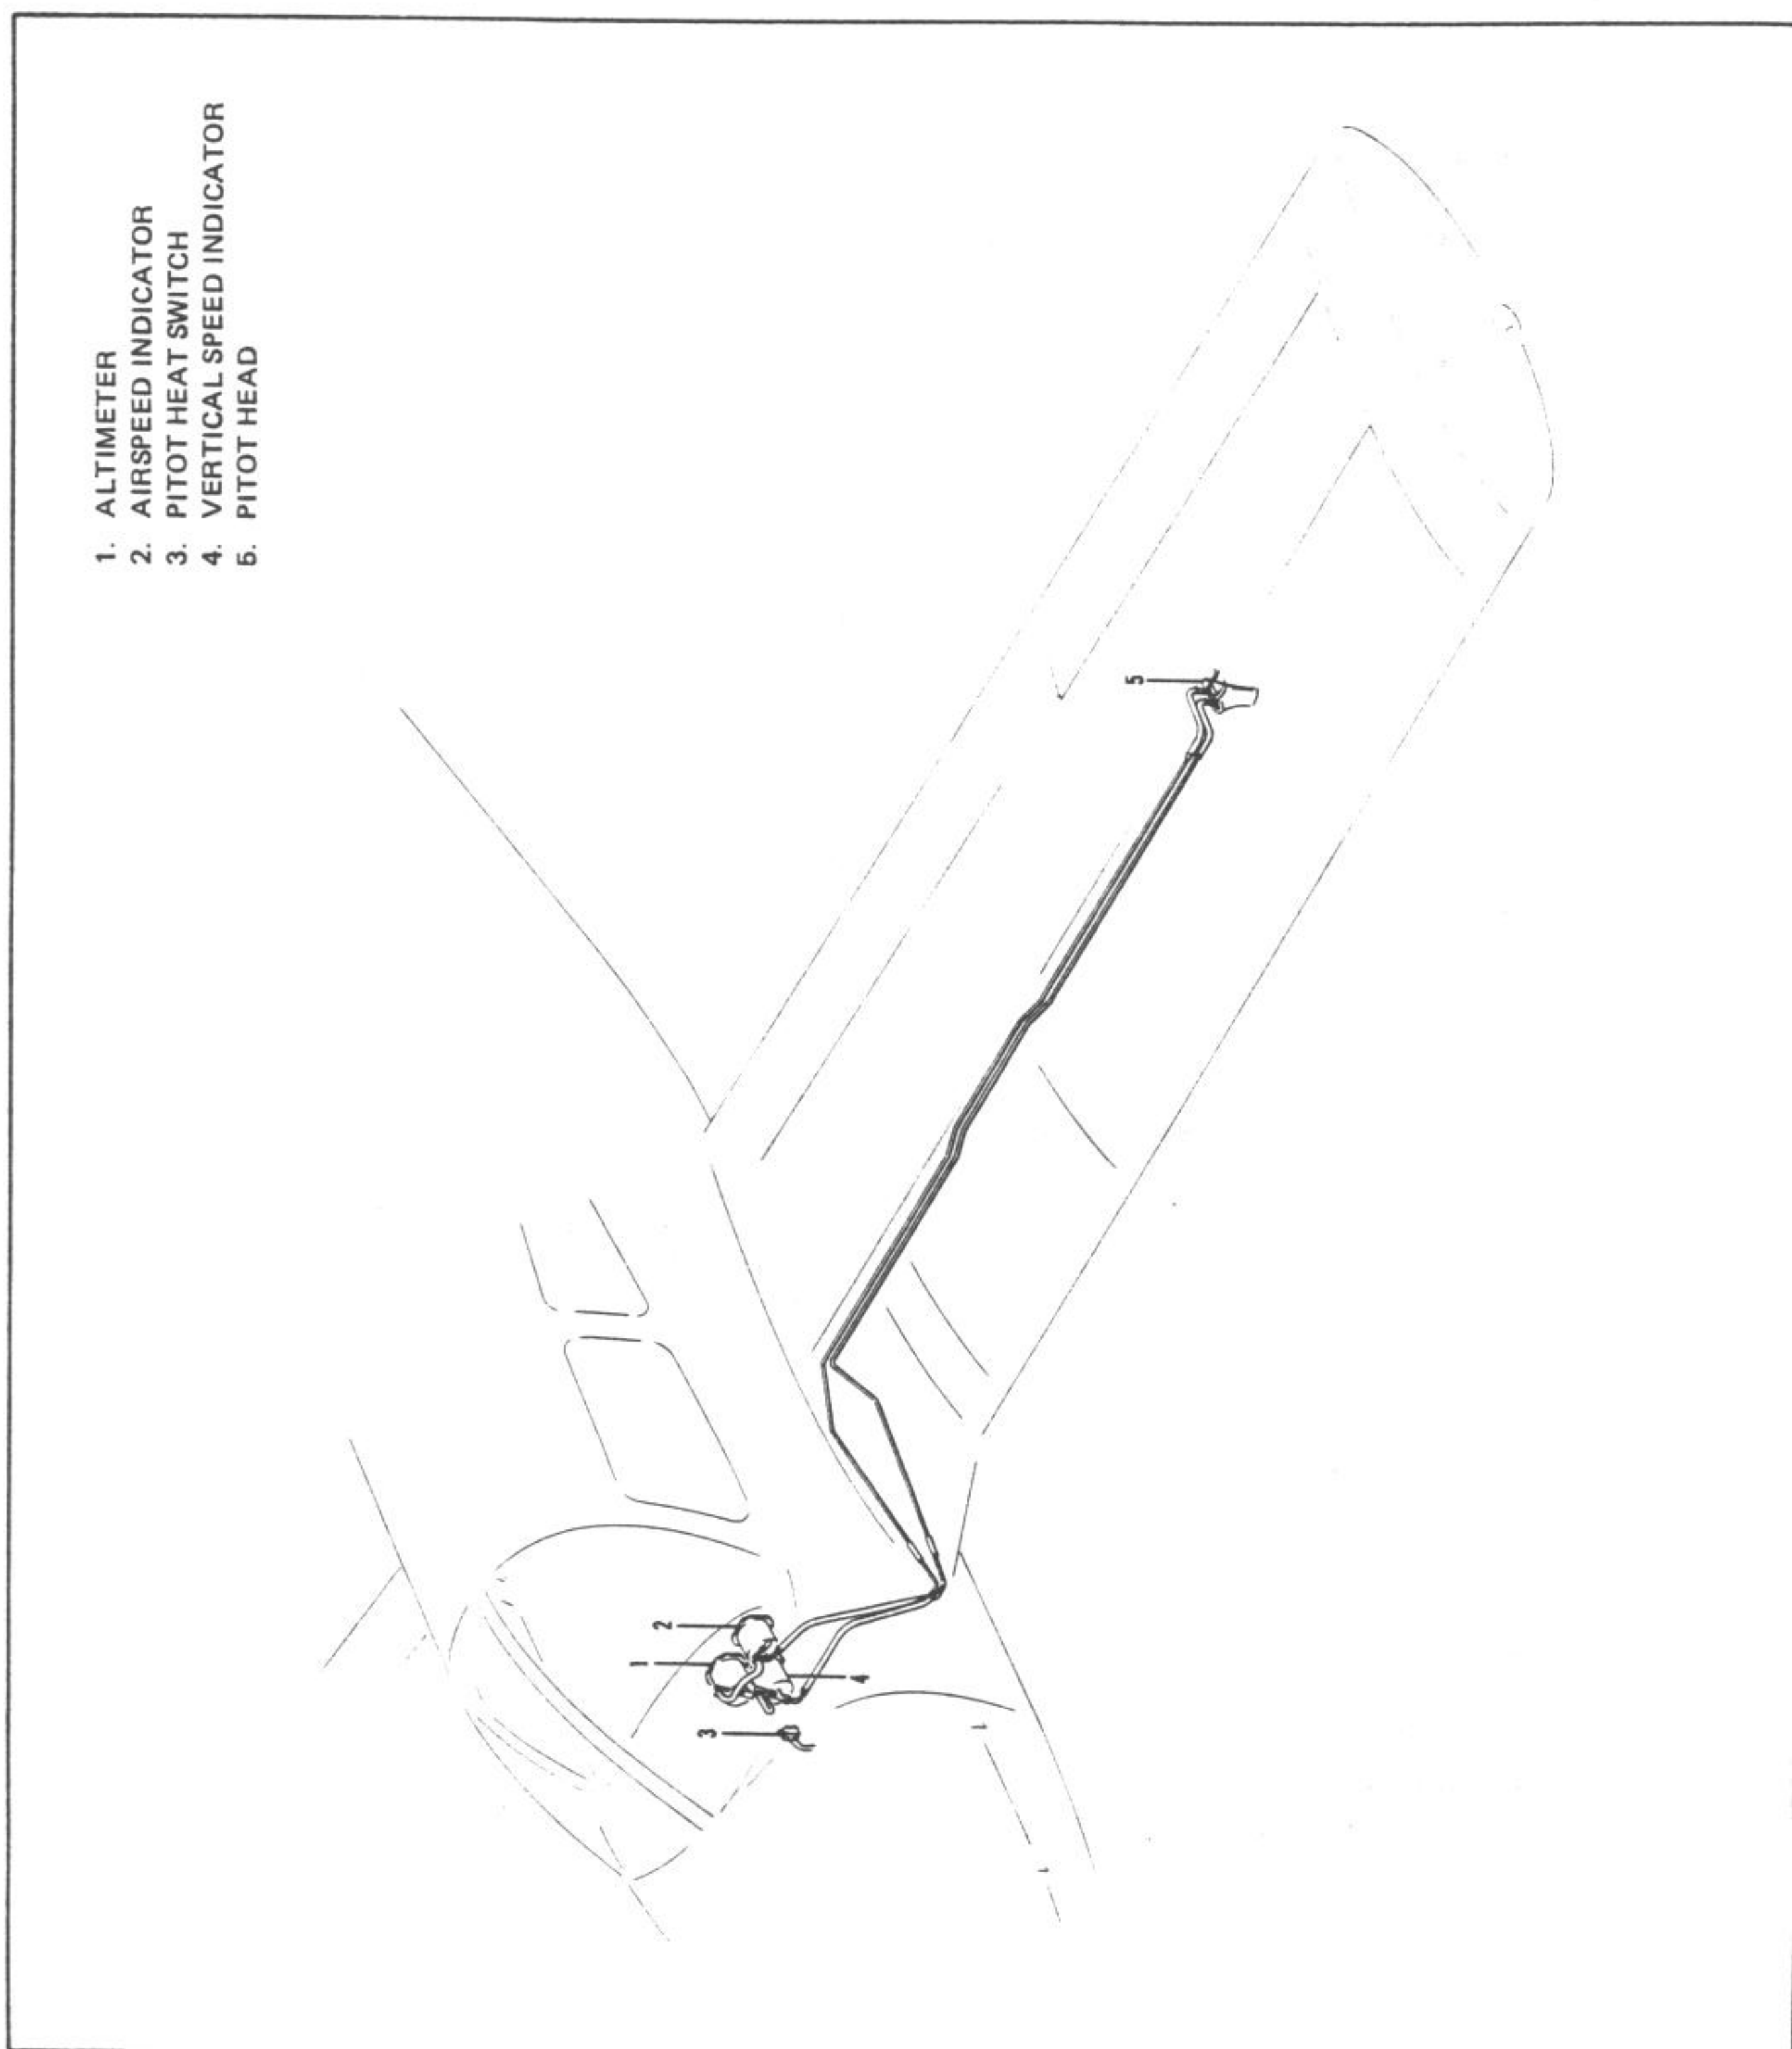

PITOT-STATIC SYSTEM

Figure 7-23

7.23 PITOT-STATIC SYSTEM

The system supplies both pitot and static pressure for the airspeed indicator, altimeter and vertical speed indicator (when installed).

Pitot and static pressure are picked up by the pitot head on the bottom of the left wing. An optional heated pitot head, which alleviates problems with icing or heavy rain, is available. The switch for pitot heat is located on the switch panel to the pilot's left.

To prevent bugs and water from entering the pitot and static pressure holes when the airplane is parked, a cover should be placed over the pitot head. A partially or completely blocked pitot head will give erratic or zero readings on the instruments.

NOTE

During preflight, check to make sure the pitot cover is removed.

7.25 CABIN FEATURES

For ease of entry and exit and for pilot and passenger comfort, the front seats are adjustable fore and aft. All seats recline and have armrests and are available with optional headrests. The front seats can be equipped with optional vertical adjustment. The center and rear seats are easily removed for additional cargo space. Rear seat installations incorporate leg retainers with latching mechanisms which must be released before the rear seats can be removed. Releasing the retainers is easily accomplished by turning the latching mechanisms 90° with a coin or screwdriver. An optional jump seat can be installed between the two middle seats to give the airplane a seven-place capacity.

Single strap shoulder harnesses controlled by inertia reels are standard equipment for the front seats and are offered as optional equipment for the third, fourth, fifth and sixth seats, but not for the seventh seat. The shoulder strap is routed over the shoulder adjacent to the windows and attached to the lap belt in the general area of the person's inboard hip.


The inertia reel should be checked by tugging sharply on the strap. The reel will lock in place under this test and prevent the strap from extending. Under normal movement, the strap will extend and retract as required.

7.27 BAGGAGE AREA

The airplane has two separate baggage areas, each with a 100 pound capacity. A 7 cubic foot forward luggage compartment, located just aft of the fire wall, is accessible through a 16 x 22 inch door on the right side of the fuselage. A 22 cubic foot aft compartment is located behind the fifth and sixth seats and is conveniently accessible through the cargo door on the aft side of the fuselage and even during flight from inside the cabin.

NOTE

It is the pilot's responsibility to be sure when the baggage is loaded that the airplane's C.G. falls within the allowable C.G. range. (Refer to Weight and Balance Section.)

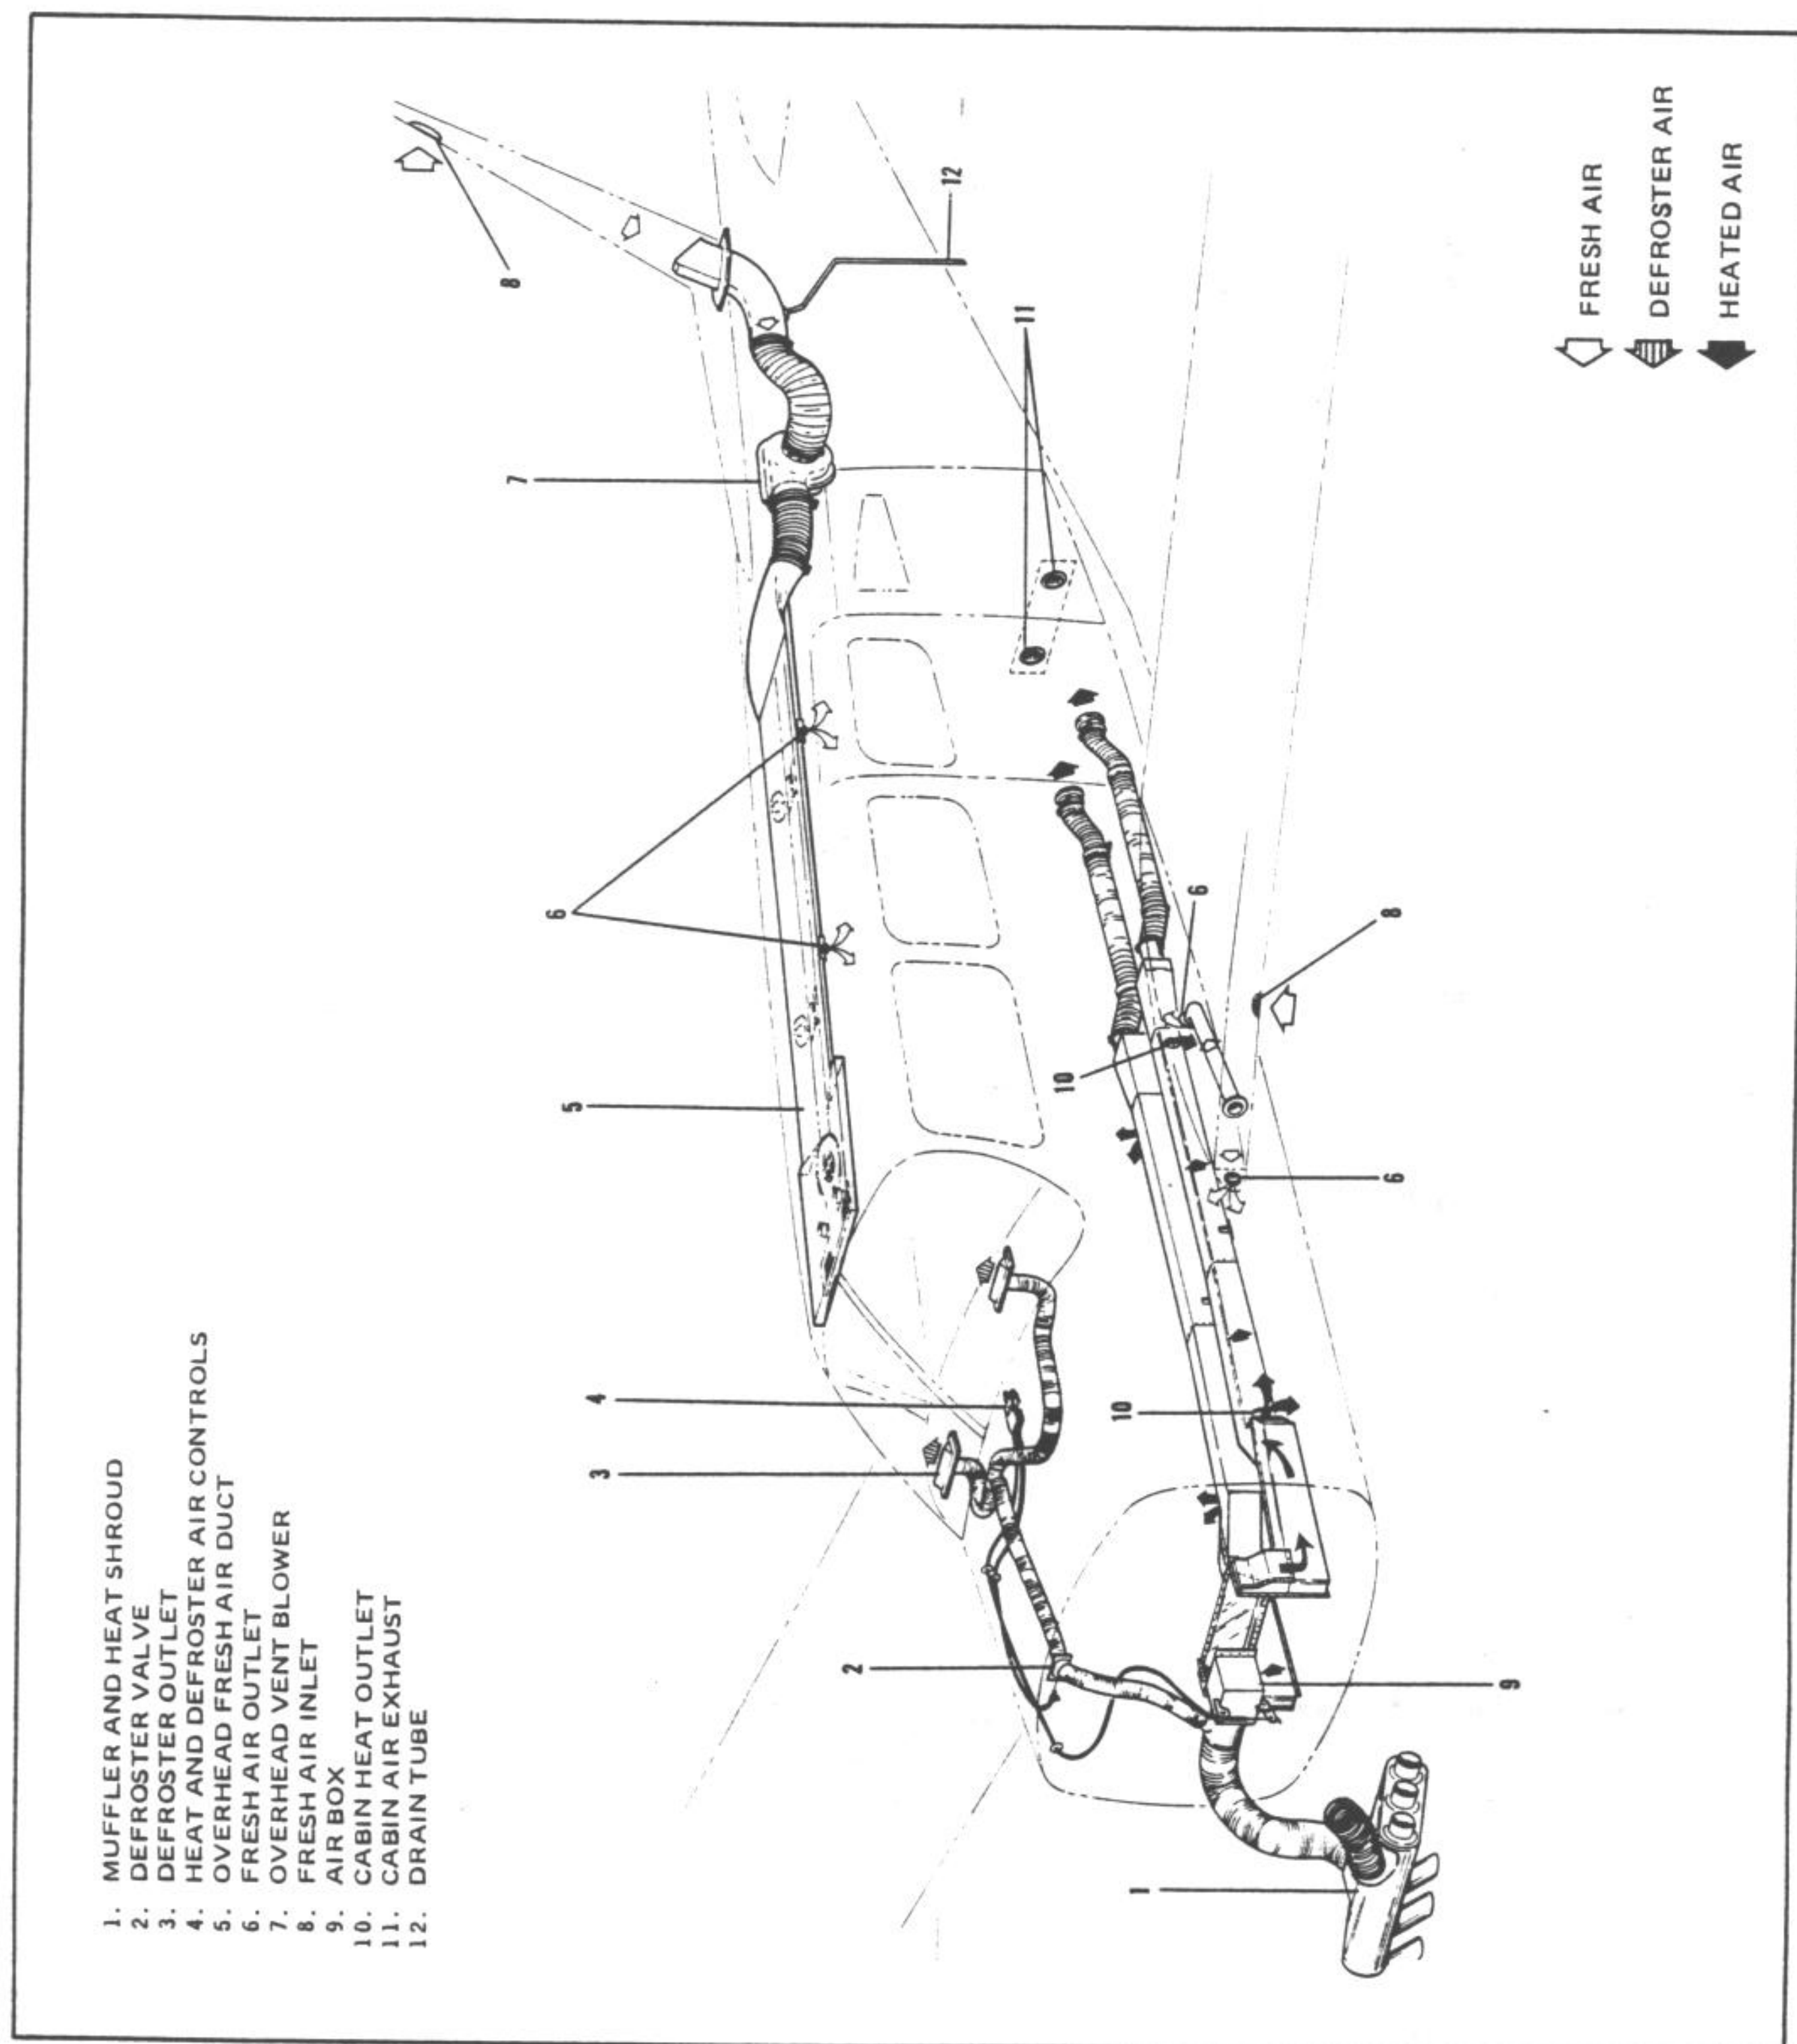

HEATING AND VENTILATING SYSTEM

Figure 7-25

7.29 HEATING AND VENTILATING SYSTEM

Fresh air is ducted from the front left engine baffle to the heater muff by a flexible hose. Hot air from the heater muff is routed through a flexible hose on the right side of the engine compartment, to the valve box mounted on the fire wall just above the tunnel cut out. It is then ducted down each side of the tunnel below the baggage floor to the cabin ducting and outlets (Figure 7-25).

Defrost heat is bled off from the main flow at the valve box and routed through flexible hose to a shut-off valve located to the right of center at the top of the fire wall. From this point, it is ducted to the defroster outlets.

Fresh air inlets are located in the leading edge of each wing at the intersection of the tapered and straight sections, and in the leading edge of the fin. Two large adjustable outlets are located on each side of the cabin, one forward and one aft of the front seat near the floor. There are also adjustable outlets above each seat. In airplanes without air conditioning, an optional blower may be added to the overhead vent system to aid in the circulation of cabin air.

7.31 STALL WARNING

An approaching stall is indicated by a stall warning horn which is activated between five and ten miles per hour above stall speed. Mild airframe buffeting and gentle pitching may also precede the stall. Stall speeds are shown on graphs in the Performance Section. The stall warning horn emits a continuous sound. The landing gear warning horn is different in that it emits a 90 cycle per minute beeping sound. The stall warning horn is activated by a lift detector installed on the leading edge of the left wing. During preflight, the stall warning system should be checked by turning the master switch "ON", lifting the detector and checking to determine if the horn is actuated.

7.33 FINISH

All exterior surfaces are primed with etching primer and finished with acrylic lacquer.

7.35 AIR CONDITIONING*

The air conditioning system is a recirculating air system. The major components include an evaporator, a condenser, a compressor, a blower, switches and temperature controls.

The evaporator is located behind the rear baggage compartment. This cools the air used for the air conditioning system.

The condenser is mounted on a retractable scoop located on the bottom of the fuselage and to the rear of the baggage compartment area. The scoop extends when the air conditioner is ON and retracts to a flush position when the system is OFF.

The compressor is mounted on the forward right underside of the engine. It has an electric clutch which automatically engages or disengages the compressor to the belt drive system of the compressor.

*Optional equipment

Air from the baggage area is drawn through the evaporator by the blower and distributed through an overhead duct to individual outlets located adjacent to each occupant.

The switches and temperature control are located on the lower right side of the instrument panel in the climate control center panel. The temperature control regulates the temperature of the cabin. Turning the control clockwise increases cooling; counterclockwise decreases cooling.

The fan speed switch and the air conditioning ON-OFF switch are inboard of the temperature control. The fan can be operated independently of the air conditioning; however, the fan must be on for air conditioner operation. Turning either switch off will disengage the compressor clutch and retract the condenser door. Cooling air should be felt within one minute after the air conditioner is turned on.

NOTE

If the system is not operating in 5 minutes, turn the system OFF until the fault is corrected.

The fan switch allows operation of the fan with the air conditioner turned OFF to aid in cabin air circulation. "LOW," "MED" or "HIGH" can be selected to direct a flow of air through the air conditioner outlets in the overhead duct. These outlets can be adjusted or turned off individually.

The condenser door light is located to the right of the engine instrument cluster in front of the pilot. The door light illuminates when the door is open and is off when the door is closed.

A circuit breaker on the circuit breaker panel protects the air conditioning electrical system.

Whenever the throttle is in the full forward position, it actuates a micro switch which disengages the compressor and retracts the scoop. This allows maximum power and maximum rate of climb. The fan continues to operate and the air will remain cool for about one minute. When the throttle is retarded approximately 1/4 inch, the clutch will engage, the scoop will extend, and the system will again supply cool, dry air.

7.37 PIPER EXTERNAL POWER*

An optional starting installation known as Piper External Power (PEP) is accessible through a receptacle located on the left side of the nose section aft of the cowl. An external battery can be connected to the socket, thus allowing the operator to crank the engine without having to gain access to the airplane's battery.

*Optional equipment

7.39 EMERGENCY LOCATOR TRANSMITTER*

The Emergency Locator Transmitter (ELT) when installed, is located in the aft portion of the fuselage just below the stabilator leading edge and is accessible through a plate on the right side of the fuselage. This plate is attached with three slotted-head nylon screws for ease of removal; these screws may be readily removed with a variety of common items such as a dime, a key, a knife blade, etc. If there are no tools available in an emergency the screw heads may be broken off by any means. The ELT is an emergency locator transmitter which meets the requirements of FAR 91.52. The unit operates on a self-contained battery. The replacement date as required by FAA regulations is marked on the transmitter label.

The battery should also be replaced if the transmitter has been used in an emergency situation or if accumulated test time exceeds one hour. The unit is equipped with a portable antenna to allow the locator to be removed from the airplane in case of an emergency and used as a portable signal transmitter.

On the unit itself is a three position selector switch placarded "OFF," "ARM" and "ON." The "ARM" position is provided to set the unit to the automatic position so that it will transmit only after impact and will continue to transmit until the battery is drained to depletion or until the switch is manually moved to the "OFF" position. The "ARM" position is selected when the transmitter is installed at the factory and the switch should remain in that position whenever the unit is installed in the airplane. The "ON" position is provided so the unit can be used as a portable transmitter or in the event the automatic feature was not triggered by impact or to periodically test the function of the transmitter.

Select the "OFF" position when changing the battery, when rearming the unit if it has been activated for any reason, or to discontinue transmission.

NOTE

If the switch has been placed in the "ON" position for any reason, the "OFF" position has to be selected before selecting "ARM." If "ARM" is selected directly from the "ON" position, the unit will continue to transmit in the "ARM" position.

A pilot's remote switch, located on the left side panel, is provided to allow the transmitter to be controlled from inside the cabin.

- (a) On some models the pilot's remote switch has three positions and is placarded "ON," "AUTO/ARM," and "OFF/RESET." The switch is normally left in the "AUTO/ARM" position. To turn the transmitter off, move the switch momentarily to the "OFF/RESET" position. The aircraft master switch must be "ON" to turn the transmitter "OFF." To activate the transmitter for tests or other reasons, move the switch upward to the "ON" position and leave it in that position as long as transmission is desired.

*Optional equipment

- (b) On other models the pilot's remote switch has two positions and is placarded "ON/RESET" and "ARM (NORMAL POSITION)." The switch is normally left in the down or "ARM" position. To turn the transmitter off, move the switch to the "ON/RESET" position for one second then return it to the "ARM" position. To activate the transmitter for tests or other reasons, move the switch upward to the "ON/RESET" position and leave it in that position as long as transmission is desired.

The locator should be checked during the ground check to make certain the unit has not been accidentally activated. Check by tuning a radio receiver to 121.5 MHz. If there is an oscillating sound, the locator may have been activated and should be turned off immediately. Reset to the "ARM" position and check again to insure against outside interference.

NOTE

If for any reason a test transmission is necessary, the test transmission should be conducted only in the first five minutes of any hour and limited to three audio sweeps. If tests must be made at any other time, the tests should be coordinated with the nearest FAA tower or flight service station.